

Rear Suspension

Specifications

CAUTION:

- Replace the self-locking nuts after removal.
- Replace the self-locking bolts if you can easily thread a nut past their nylon locking inserts.
- The vehicle should be on the ground before any bolts or nuts connected to rubber mounts or bushings are tightened.

