

Engine Tune-up




Engine Oil Replacement

1. Warm up the engine.
2. Drain the engine oil.

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

NOTE: Remove the filler cap to speed draining.

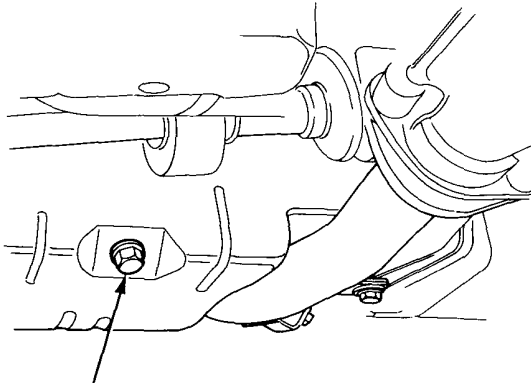


OIL PAN DRAIN PLUG
45 N·m (4.5 kg-m, 33 lb-ft)

3. Reinstall the drain plug with a new washer, and refill with the recommended oil.

Capacity	SOHC: 3.0 lit (3.2 US qt, 2.7 Imp. qt) DOHC 3.3 lit (3.5 US qt, 2.9 Imp. qt) excluding oil filter SOHC: 3.5 lit (3.7 US qt, 3.1 Imp. qt) DOHC 3.8 lit (4.0 US qt, 3.4 Imp. qt) at change, including filter SOHC: 4.0 lit (4.2 US qt, 3.5 Imp. qt) DOHC 4.3 lit (4.6 US qt, 3.8 Imp. qt)
Change	Every 10,000 km (6,000 miles) or 6 months

Recommended Engine Oil (SE or SF Grade only)

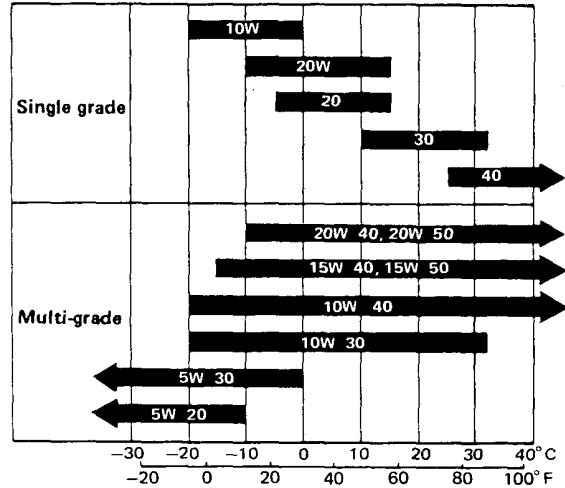

Expected Ambient Temperature before next oil change

NOTE: Oil filter should be replaced at each oil change.