

# Fuel Supply System

## Fuel Injectors

### Troubleshooting Flowchart



With CATA Self-diagnosis LED indicator blinks sixteen times: A problem in the fuel injector circuit.



With CATA

- Check Engine warning light is on.
- LED indicates CODE 16.

NOTE: On With CATA models. Start the troubleshooting from this procedure.

Turn the ignition switch OFF.

Remove HAZARD fuse in the main fuse box for 10 seconds to reset ECU.

Turn the ignition switch to START position.

NOTE: On Without CATA models. Start the troubleshooting from this procedure.

Does the engine start ?

NO

YES

Is Check Engine warning light and does LED indicate CODE 16?


NO

YES

**Intermittent failure, system is OK at this time (test drive may be necessary). Check for poor connections or loose wires at injectors, injector resistor and C313 (round connector on left shock tower).**

**With CATA only**

Check the clicking sound of each injector by means of a stethoscope when the engine is idling.

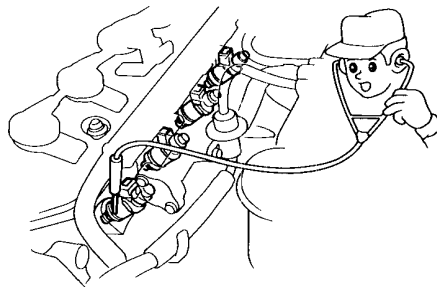

Do the injectors click ?


YES

NO

**Substitute a known-good ECU and re-check. If symptom/indication goes away, replace the original ECU.**

(To page 6-61)

(To page 6-61)

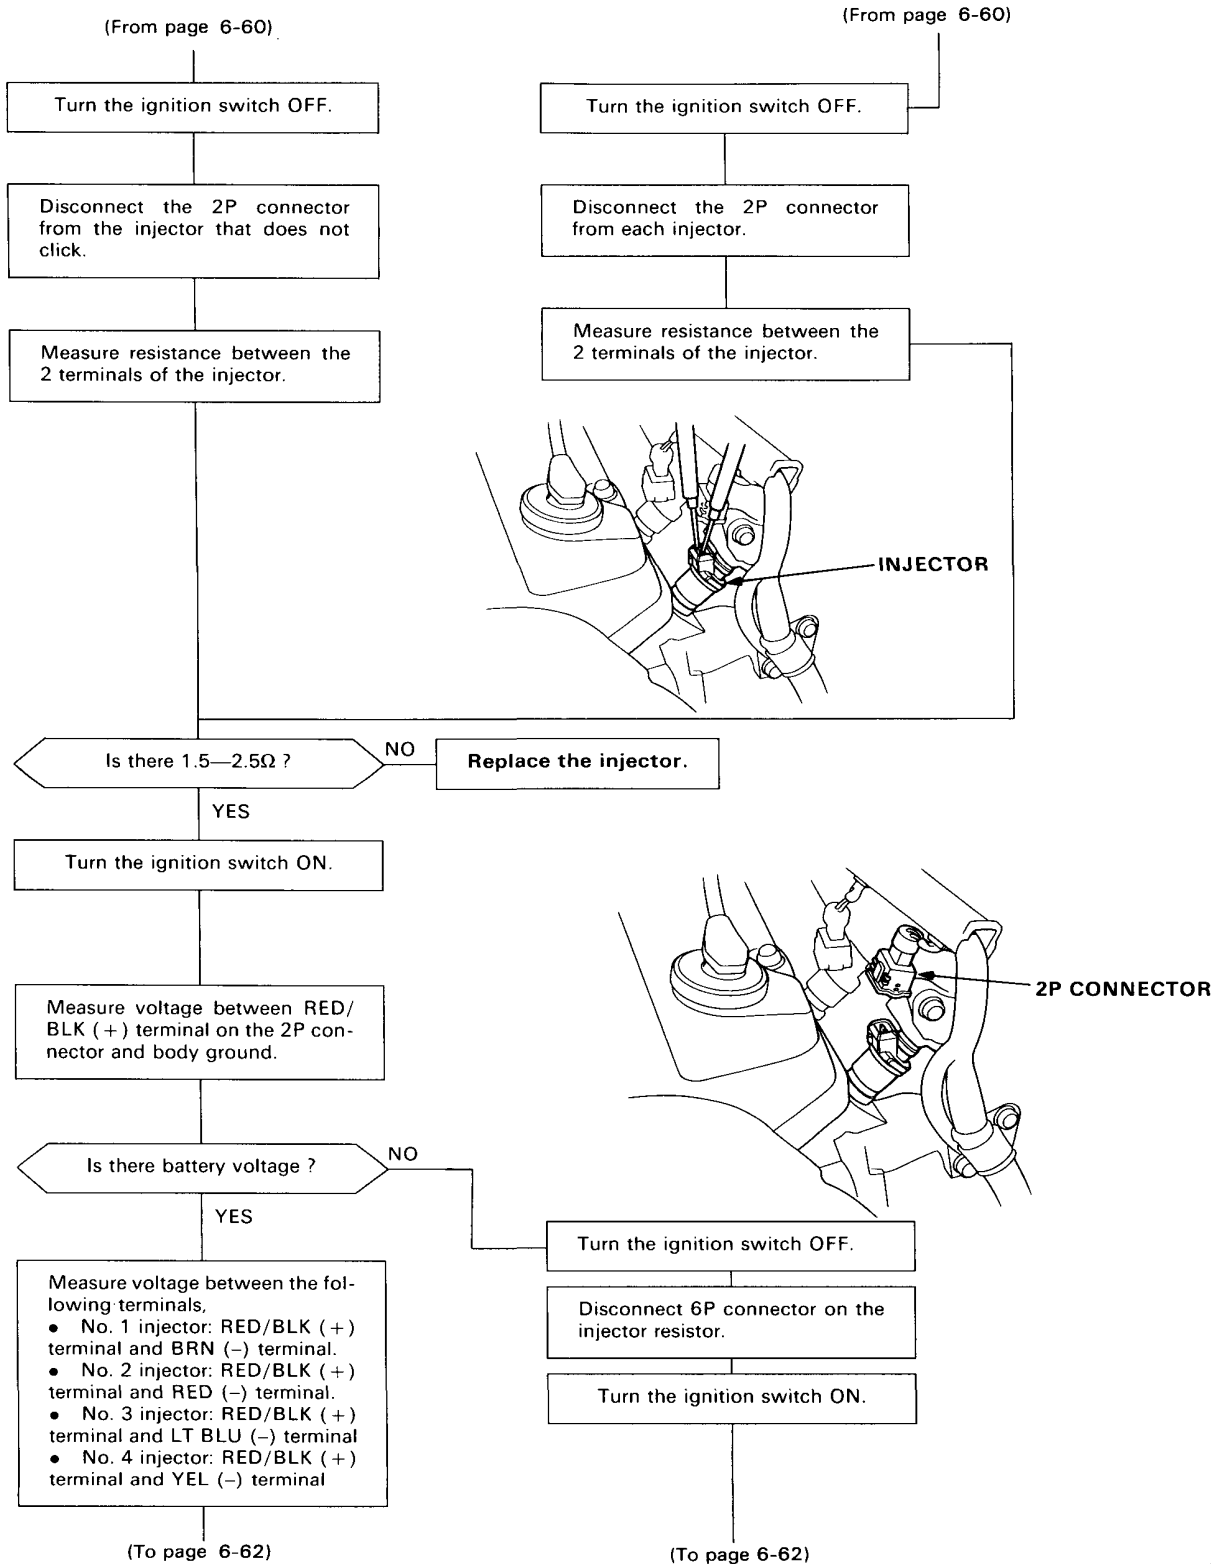

(cont'd)

# Fuel Supply System

## Fuel Injectors (cont'd)

