

# Towing


If possible, always tow the car with the front wheels off the ground. The tow truck driver should position wood spacer blocks between the car's frame and the chains and lift straps, to avoid damaging the bumper and the body.

Do not use the bumpers to lift the car or to support the car's weight while towing. Check local regulations for towing. A rope may be attached to the hook shown in the illustration. Do not attach a tow bar to either bumper.

**⚠ WARNING** Do not push or tow a car to start it. The forward surge when the engine starts could cause a collision. Also, under some conditions, the catalytic converter could be damaged.

If the car is to be towed with the front wheels on the ground, observe the following precautions: Shift the transmission to Neutral and turn the ignition key to the "I" position.

**CAUTION:** Do not exceed 55 km/h (35 mph) or tow for distances of more than 80 km (50 miles).

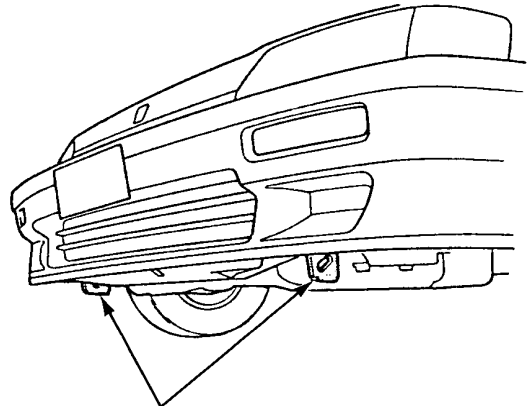

TOWING HOOKS