



Engine Tune-up

Manual Inspection of Rocker Arms

1. Set the No.1 cylinder at TDC.
2. Remove the plug wire cover and the plug wires.
3. Remove the plug wire clamps while pulling up on the lock.

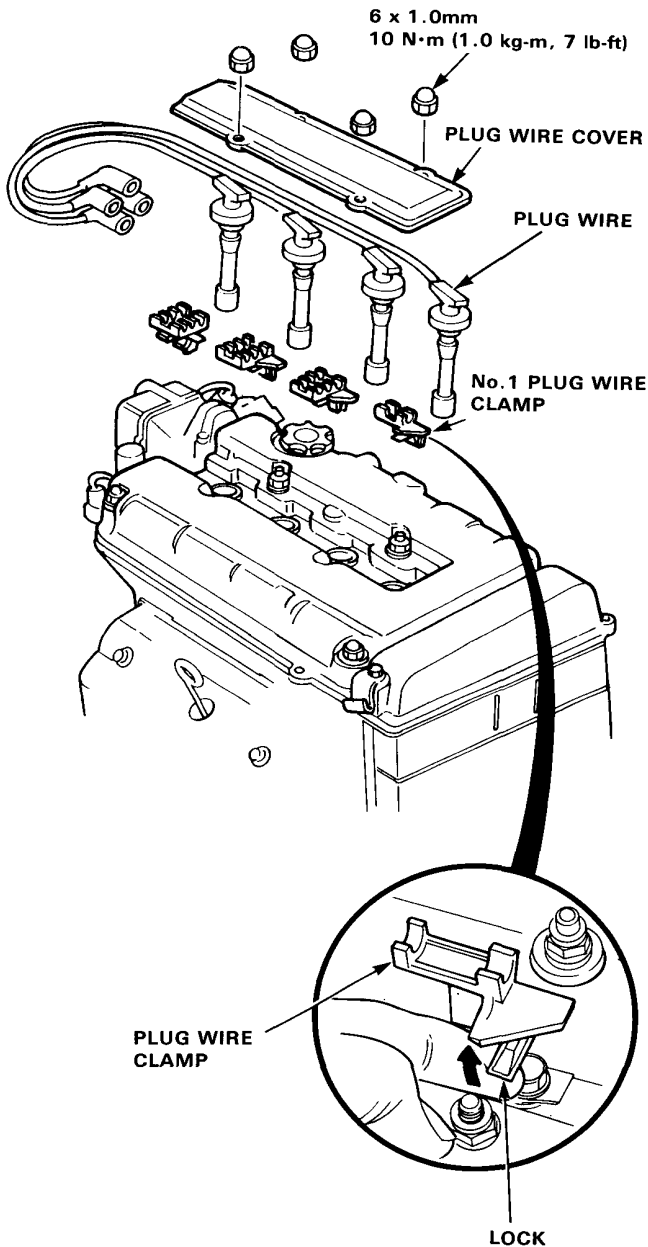

4. Remove the valve cover.
5. Push the mid rocker arm on the No.1 cylinder manually.
6. Check that the mid rocker arm moves independently of the primary and secondary rocker arms.

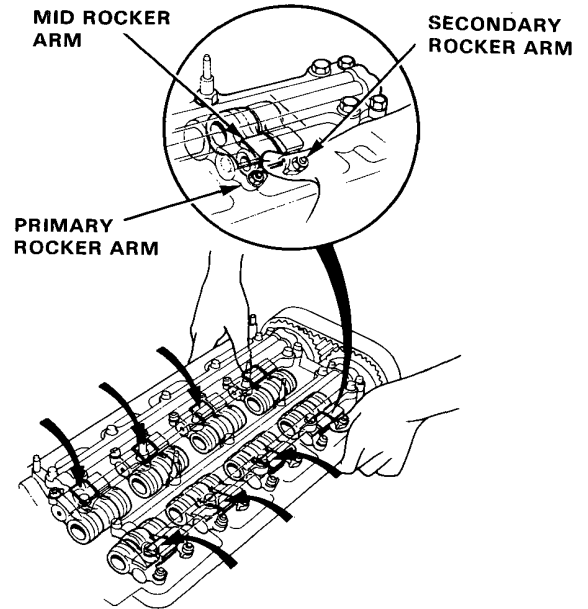

7. Check the mid rocker arm of each cylinder at TDC.
 - If the mid rocker arm does not move, remove the mid primary and secondary rocker arms as an assembly and check that the pistons in the mid and primary rocker arms move smoothly.
 - Replace the rocker arms as an assembly if there is any abnormality.