

# Water Pump



## Inspection

1. Remove the timing belt (page 5-43).
2. Check the water pump pulley turn freely.
3. Check the signs of seal leakage.

**NOTE:** Small amount of "weeping" from bleed hole is normal.

