


Component Locations

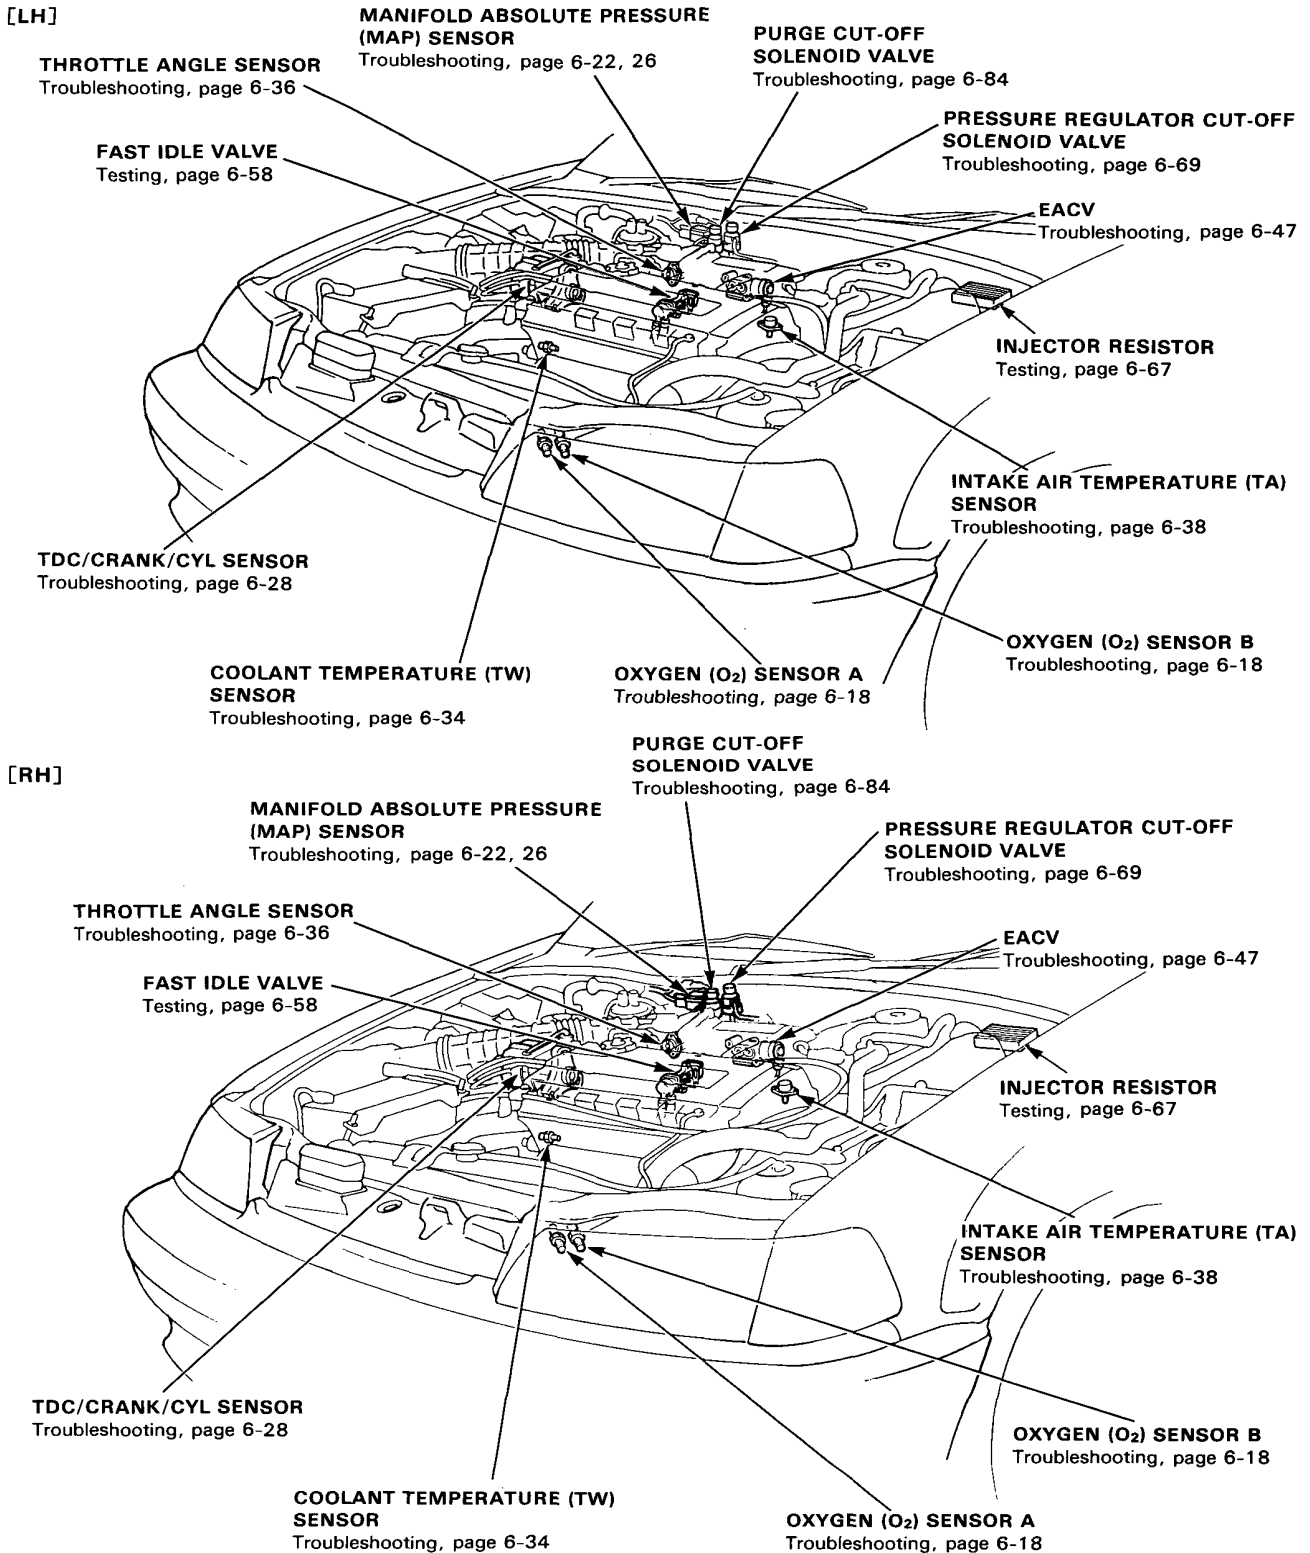

Index



Component Locations

Index

[LH]

AIR CLEANER ELEMENT

Replace every 2 years or 40,000 km (24,000 miles) whichever comes first.

THROTTLE BODY

Inspection, page 6-76
Disassembly, page 6-76


DASHPOT DIAPHRAGM

Testing, page 6-78

AIR INTAKE TUBE

THROTTLE CABLE

Inspection/Adjustment, page 6-75
Installation, page 6-75

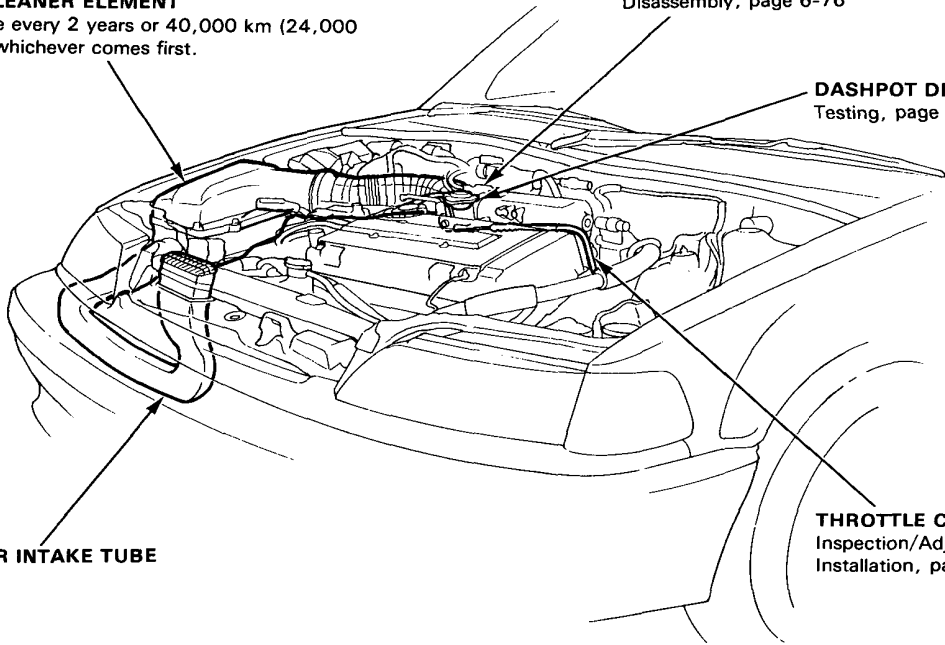

[RH]

AIR CLEANER ELEMENT

- KE: Replace every 2 years or 40,000 km (24,000 miles) whichever comes first.
- Others: Replace every 1 year or 20,000 km (12,000 miles) whichever comes first.

THROTTLE BODY

Inspection, page 6-76
Disassembly, page 6-76


DASHPOT DIAPHRAGM

Testing, page 6-78

AIR INTAKE TUBE


THROTTLE CABLE

Inspection/Adjustment, page 6-75
Installation, page 6-75

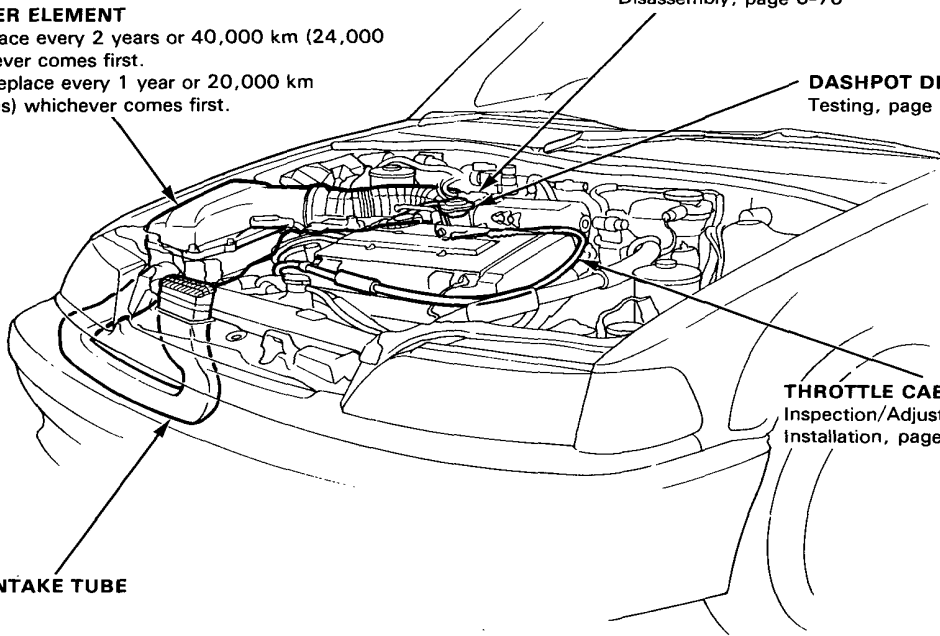




[LH]

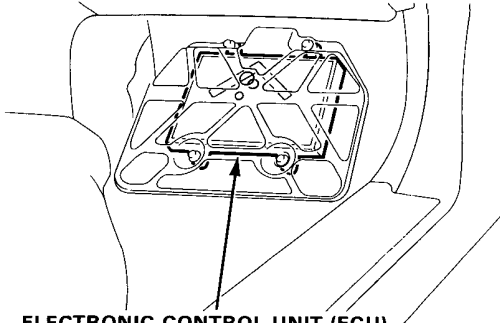


ELECTRONIC CONTROL UNIT (ECU)
Troubleshooting, page 6-15

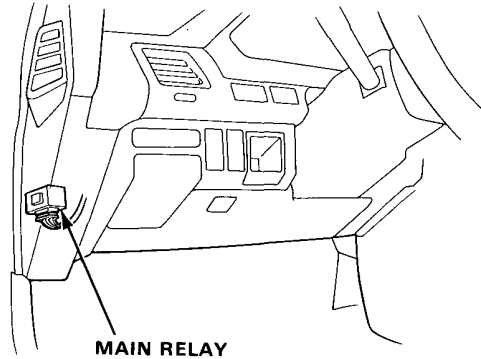


MAIN RELAY

[RH]

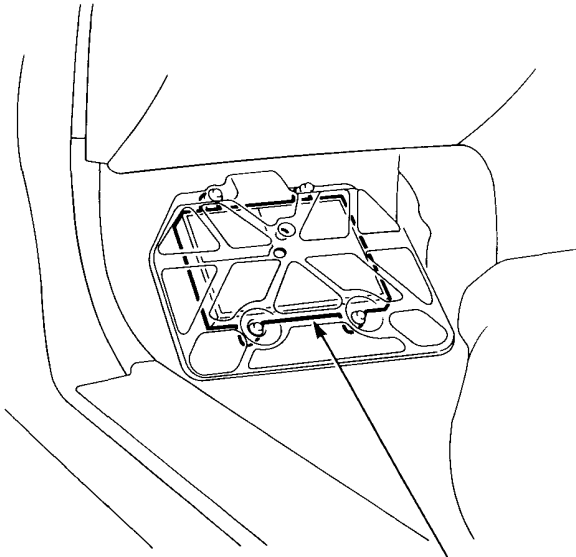

ELECTRONIC CONTROL UNIT (ECU)
Troubleshooting, page 6-15

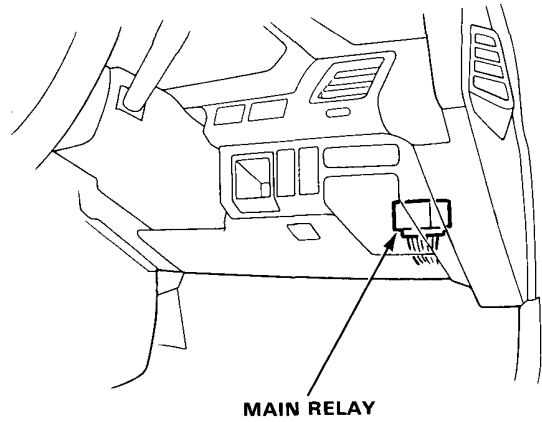

MAIN RELAY