

Symbol Marks

The following symbols stand for:



:Apply engine oil.



:Apply brake fluid.



:Apply grease.



:Apply or check vacuum.

1, 2, 3, : Sequence for removal or installation
1, 2, 3, : Sequence for removal or installation

Abbreviation

A/C	Air Conditioner
ALB	3-channel Anti Lock Brake
Assy	Assembly
ATT	Attachment
B or BAT	Battery
CATA	Catalytic Converter
EACV	Electronic Air Control Valve
ECU	PGM-FI Electronic Control Unit
EX	Exhaust
GND	Ground
IG	Ignition
IN	Intake
INT	Intermittent
L	Left
LHD	Left Hand Drive
PCV	Positive Crankcase Ventilation
PGM-FI	Programmed Fuel-Injection
R	Right
RHD	Right Hand Drive
SW	Switch
SOL. V	Solenoid Valve
TDC	Top Dead Center
V-TEC	HONDA Variable Valve Timing and Lift Electronic Control System