

Maintenance Schedule

Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace		I—Inspect. After inspection, clean, adjust, repair or replace if necessary.			
	x 1,000 km x 1,000 miles months	20 12 12	40 24 24	60 36 36	80 48 48	100 60 60
Idle speed and idle CO* ³		I	I	I	I	I
Idle speed and idle CO* ⁴						I
Valve clearance		I	I	I	I	I
Rocker arms			I		I	
Alternator drive belt			I		I	
Timing belt						R
Water pump						I
■ Engine oil and oil filter		Replace every 10,000 km (6,000 miles) or 6 months				
■ Transmission oil			R		R	
■ Radiator coolant					R* ¹	
Cooling system hoses and connections			I		I	
Air cleaner element (Viscous type)			R		R	
Fuel filter			R		R	
Tank, fuel line and connections			I		I	
Evaporative emission control system						I
Ignition timing and control system* ³			I		I	
Ignition timing and control system* ⁴						I
Spark plugs			R* ²		R* ²	
Distributor cap and rotor* ³			I		I	
Distributor cap and rotor* ⁴						I
Ignition wiring* ³			I		I	
Ignition wiring* ⁴						I
Positive crankcase ventilation valve* ³			I		I	
Positive crankcase ventilation valve* ⁴						I

■: These service intervals assume routine checking and replenishment has been done, as needed, by the customer.

* 1 Thereafter, replace every 2 years or 40,000 km (24,000 miles), whichever comes first.

* 2 For KS type, replace every 2 years or 40,000 km (24,000 miles), whichever comes first after 30,000 km (18,000 miles).

* 3 Except KS, KX model

* 4 KS, KX model



Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace		I—Inspect. After inspection, clean, adjust, repair or replace if necessary.			
ITEM	x 1,000 km x 1,000 miles months	20 12 12	40 24 24	60 36 36	80 48 48	100 60 60
Brake hoses and lines (Including ALB hoses and pipes for KE ALB models)		I	I	I	I	I
Brake fluid (Including ALB fluid for KE ALB models)			R		R	
Front brake discs and calipers		I	I	I	I	I
Front brake pads		Inspect every 10,000 km (6,000 miles) or 6 months				
Rear brake discs, calipers and pads			I		I	
Parking brake		I	I		I	
Clutch release arm travel		I	I	I	I	I
Exhaust pipe and muffler		I	I	I	I	I
Suspension mounting bolts		I	I	I	I	I
Front wheel alignment		I	I	I	I	I
Steering operation, tie rod ends, steering gear box and boots		I	I		I	
ALB high pressure hose (for KE ALB models)					R	
ALB operation (for KE ALB models)		I	I		I	
Catalytic converter heat shield					I	

CAUTION: The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

Severe driving conditions include:

A : Repeated short distance driving

B : Driving in dusty conditions

C : Driving in severe cold weather

D : Driving in areas using road salt or other corrosive materials

E : Driving on rough and/or muddy roads

F : Towing a trailer

R—Replace.

I—Inspect. After inspection, clean, adjust, repair or replace if necessary.

Condition	Maintenance item	Maintenance operation	Interval
A B . . . F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 3 months
. F	Transmission oil	R	Every 20,000 km (12,000 miles) or 12 months
A B . D E F	Front brake discs and calipers	I	Every 10,000 km (6,000 miles) or 6 months
A B . D E F	Rear brake discs, calipers and pads	I	Every 20,000 km (12,000 miles) or 12 months
A B C . E F	Clutch release arm travel	I	Every 10,000 km (6,000 miles) or 6 months

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.