

# Exhaust Pipe and Muffler

## Replacement

### CAUTION:

- Remove the oxygen sensors (on the exhaust manifold) before disconnecting the exhaust manifold and the exhaust pipe A.
- Do not use air wrench or hammer for disconnecting the exhaust manifold and the exhaust pipe A, if the oxygen sensors are not to be removed.
- Install the oxygen sensors after connecting the exhaust manifold and the exhaust pipe A.

- Do not use air wrench for tightening self-locking nuts of the exhaust pipe A, if the oxygen sensors are not to be removed.

NOTE: Use new gaskets and self-locking nuts when reassembly.

