



Water Pump

Inspection

1. Remove the timing belt (page 5-43).
2. Check the water pump pulley turn freely.
3. Check the signs of seal leakage.

NOTE: Small amount of "weeping" from bleed hole is normal.

