





Component Locations

Index

[LH]

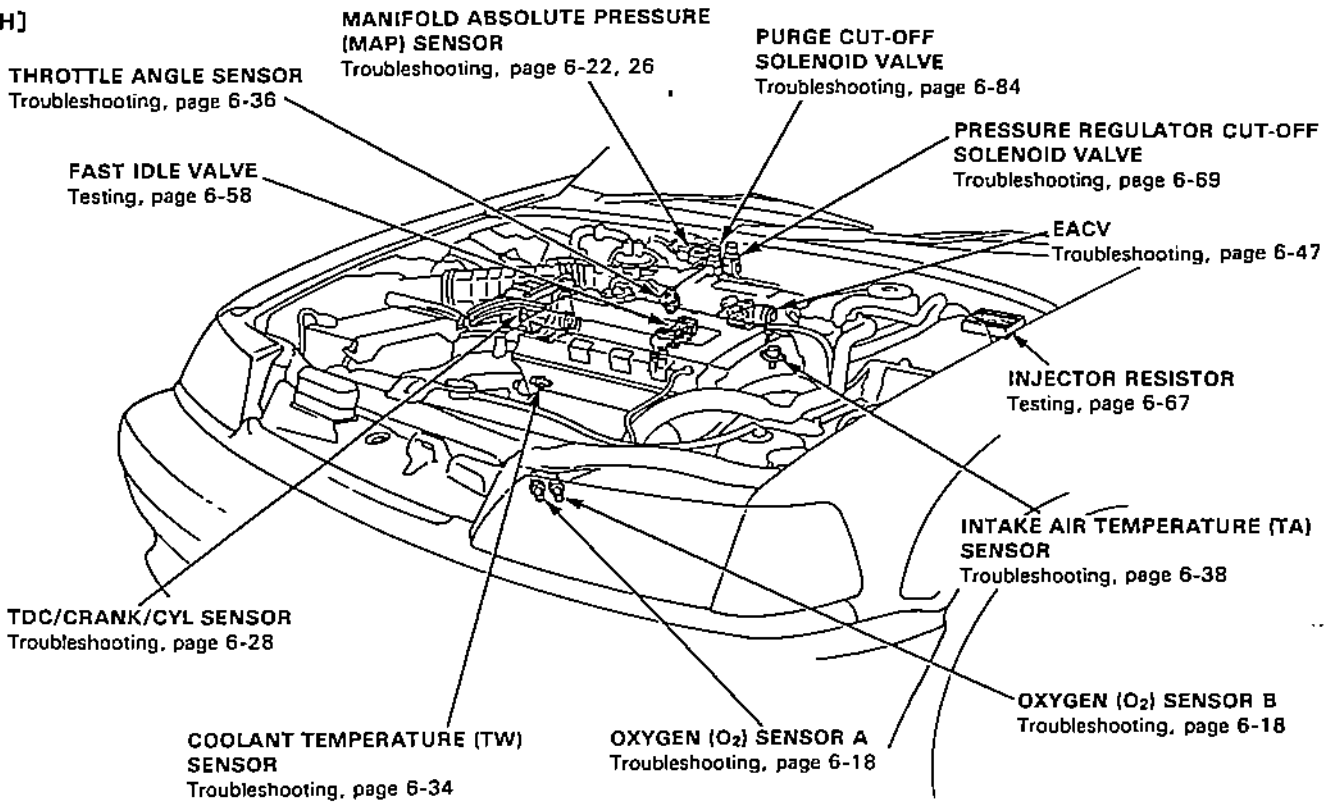

[RH]

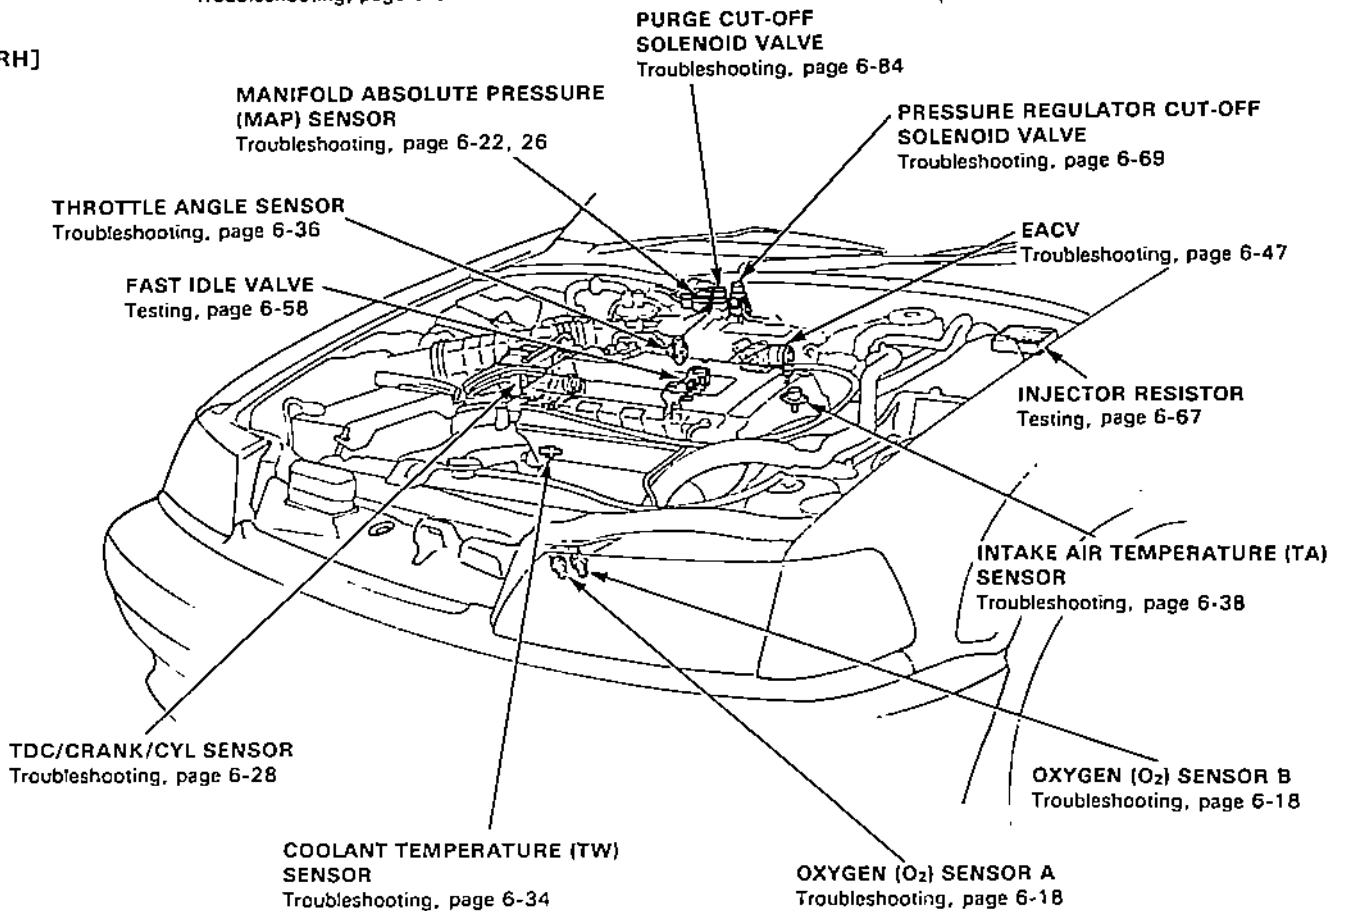

Component Locations

Index

[LH]

AIR CLEANER ELEMENT

Replace every 2 years or 40,000 km (24,000 miles) whichever comes first.

THROTTLE BODY

Inspection, page 6-76

Disassembly, page 6-76

DASHPOT DIAPHRAGM

Testing, page 6-78

AIR INTAKE TUBE

THROTTLE CABLE

Inspection/Adjustment, page 6-75

Installation, page 6-75

[RH]

AIR CLEANER ELEMENT

● KE: Replace every 2 years or 40,000 km (24,000 miles) whichever comes first.

● Others: Replace every 1 year or 20,000 km (12,000 miles) whichever comes first.

THROTTLE BODY

Inspection, page 6-76

Disassembly, page 6-76

DASHPOT DIAPHRAGM

Testing, page 6-78

AIR INTAKE TUBE


THROTTLE CABLE

Inspection/Adjustment, page 6-75


Installation, page 6-75



[LH]

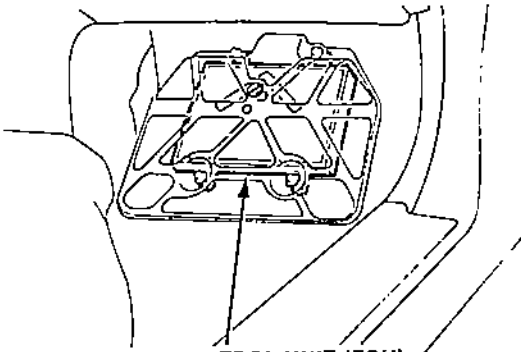


ELECTRONIC CONTROL UNIT (ECU)
Troubleshooting, page 6-15

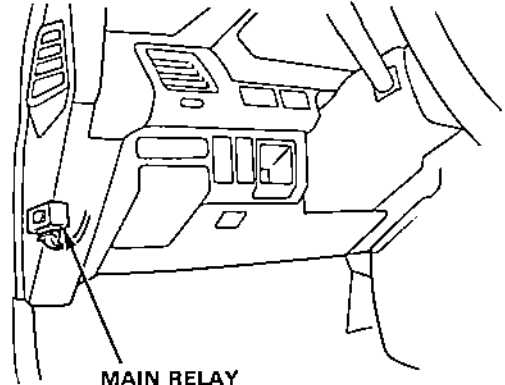


MAIN RELAY

[RH]

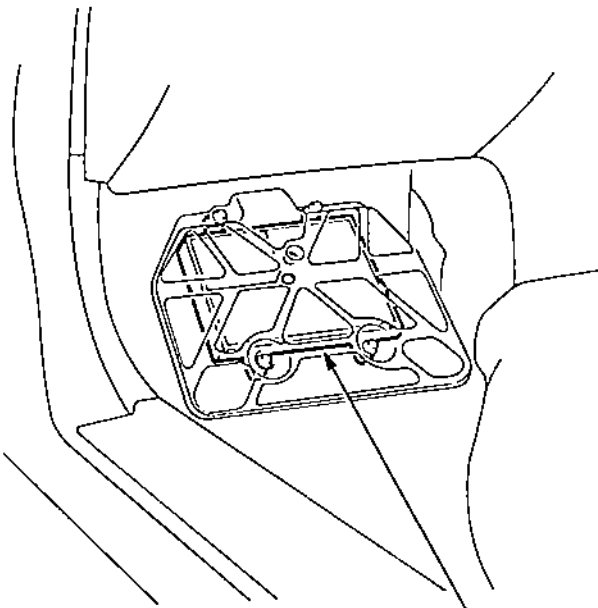

ELECTRONIC CONTROL UNIT (ECU)
Troubleshooting, page 6-15

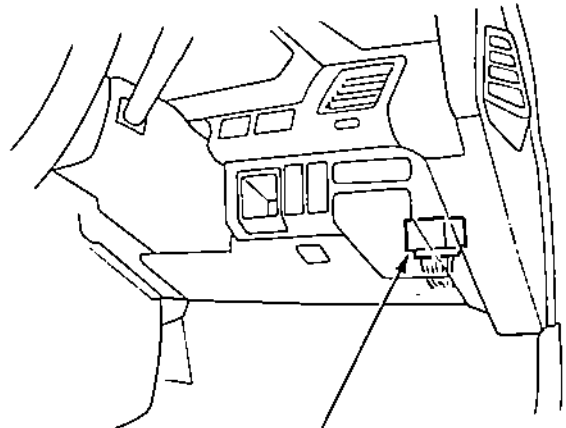

MAIN RELAY