



Troubleshooting Flowchart — Rear Defogger Switch Signal

Inspection of Rear Defogger Switch Signal.

Start the engine.

Rear defogger switch ON.

Does rear defogger operate ?

NO

Inspect the rear defogger (section 16).

YES

Turn the ignition switch OFF.

Connect the PGM-FI test harness only the main wire harness, not to the ECU (page 6-13).

Start the engine.

Rear defogger switch ON.

Measure voltage between B11 (+) terminal and A18 (-) terminal.

Is there battery voltage ?

NO

Repair open BLK/GRN wire between the rear defogger switch and ECU (B11).

YES

Rear defogger switch signal is OK.

