


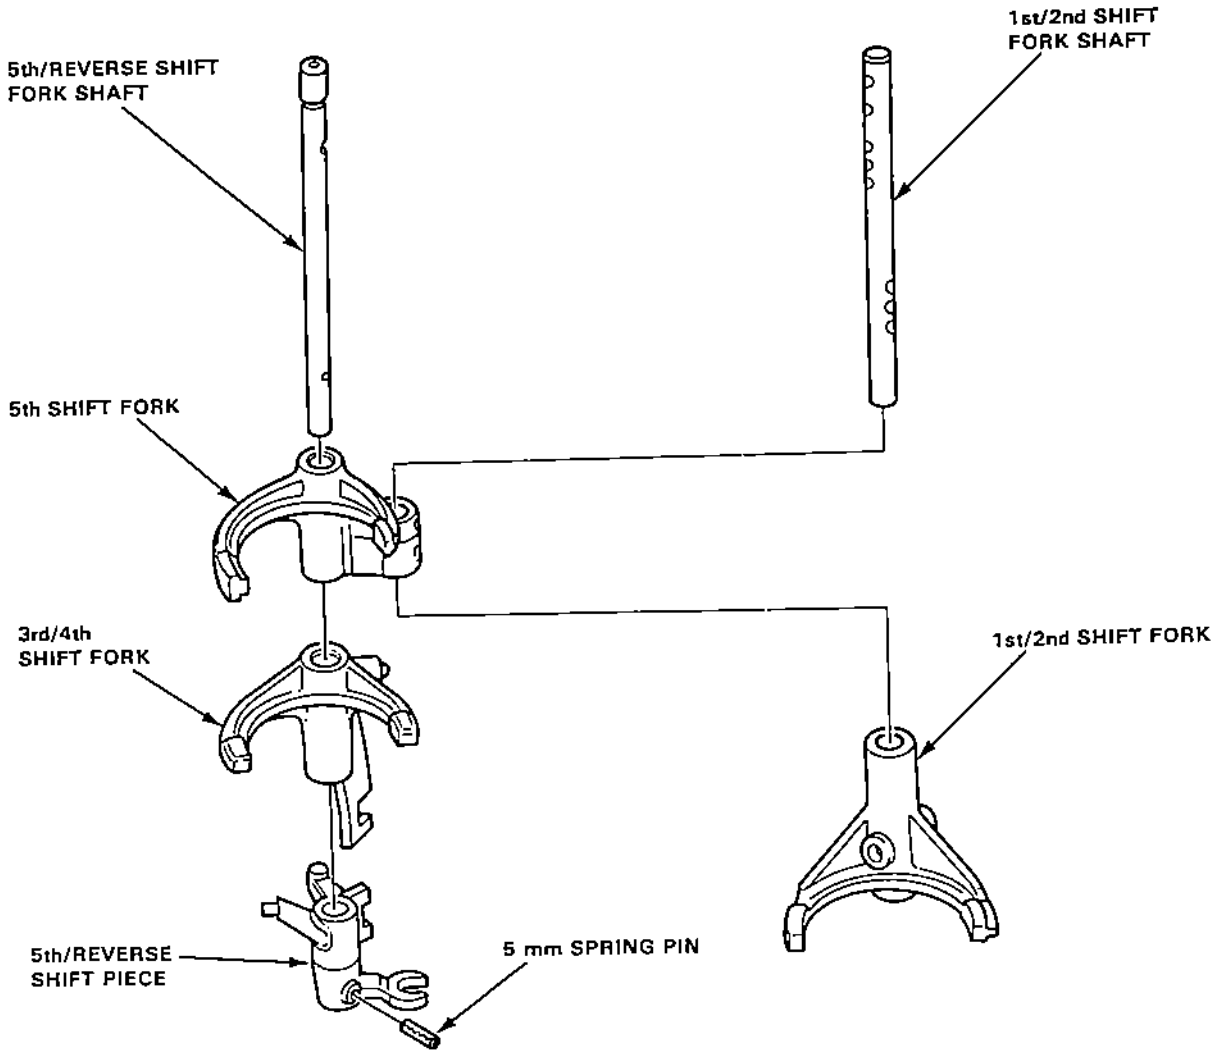


# Shift Fork Shaft Assembly

## Disassembly/Reassembly

NOTE: When assembling, install the shift fork shaft with its detents facing the hole where the balls are inserted.

 Prior to reassembling, clean all the parts in solvent, dry them and apply lubricant to any contact parts.



PIN DRIVER, 5.0 mm  
07744 - 0010400

