

# Symptom-to-System Chart

PROBLEM CODE		PROBLEMATIC COMPONENT/SYSTEM	AFFECTED				See page	OTHER COMPONENT	See page
MAIN CODE	SUB CODE		FRONT RIGHT	FRONT LEFT	REAR RIGHT	REAR LEFT			
1	—	Hydraulic Controlled Components	—	—	—	—	13-14	<ul style="list-style-type: none"> <li>—ALB fuse</li> <li>—Motor realey</li> <li>—Pressure Switch</li> <li>—Accumulator</li> <li>—Modulator</li> </ul>	13-46
2	—	Parking brake switch-related problem	—	—	—	—	13-17	Brake fluid level switch <b>BRAKE</b> light	
3	1	Pulser(s)	○				13-47		
	2			○					
	4				○	○			
4	1	Speed sensor	○				13-18		
	2			○					
	4				○				
	8					○			
5	—	Speed sensor(s)			○	○	13-19	—Modulator	
5	4				○				
	8					○			
6	—	Fail safe relay	—	—	—	—	13-20 (Function Test)	Front or rear fail safe relay	
6	1		—	—	—	—		Front fail safe relay	
	4		—	—	—	—		Rear fail safe relay	
7	1	Solenoid related problem (Open or short)	○				13-24	ALB B3 fuse	
	2			○				ALB B1 fuse	
	4				○	○		<ul style="list-style-type: none"> <li>—Rear fail safe relay</li> <li>—Pressure Switch</li> <li>—Motor relay</li> </ul>	

NOTE: In the event of simultaneous speed sensor or solenoid problems (codes 4 or 7), the control unit will only indicate the higher number sub-code.