


Fuses

Dash Fuse Box (RHD)

NOTE: Dash fuse box is located right side, under dash.

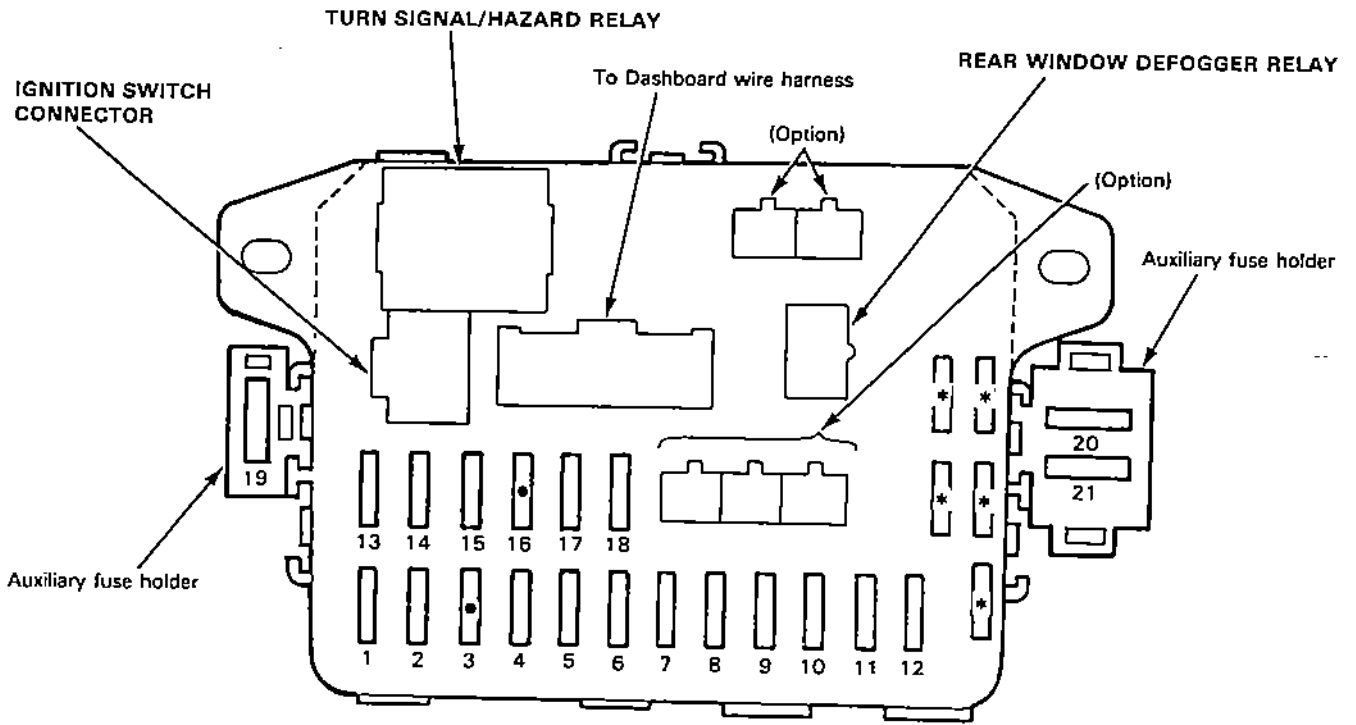

- *: SPAER FUSE
- : Not used
- No. 19(30 A)FUSE : Blower motor
- No. 20(20 A)FUSE : Driver's power window
- No. 21(20 A)FUSE : Front passenger's power window

