

Symbol Marks

The following symbols stand for:



:Apply engine oil.



:Apply brake fluid.



:Apply grease.



: Apply Power Steering Fluid.



:Apply or check vacuum.

①, ②, ③, : Sequence for removal.
❶, ❷, ❸, : Sequence for removal.

Abbreviation



A/C	Air Conditioner
BAT	Battery
CATA	Catalytic Converter
EACV	Electronic Air Control Valve
ECU	PGM-FI Electronic Control Unit
EX	Exhaust
GND	Ground
IG	Ignition
IN	Intake
INT	Intermittent
L.	Left Side
LHD	Left Hand Drive
M/T	Manual Transmission
PCV	Positive Crankcase Ventilation
PGM-FI	Programmed Fuel-Injection
P/S	Power Steering
R.	Right Side
RHD	Right Hand Drive
SW	Switch
SOL. V	Solenoid Valve
TDC	Top Dead Center