




## Illustrated Index

### Overall Suspension

#### CAUTION:

- Replace the self-locking nuts after removal.
- Replace the self-locking bolts if you can easily thread a nut past their nylon locking inserts.

NOTE: Wipe off the grease before tightening the nut at the ball joint.

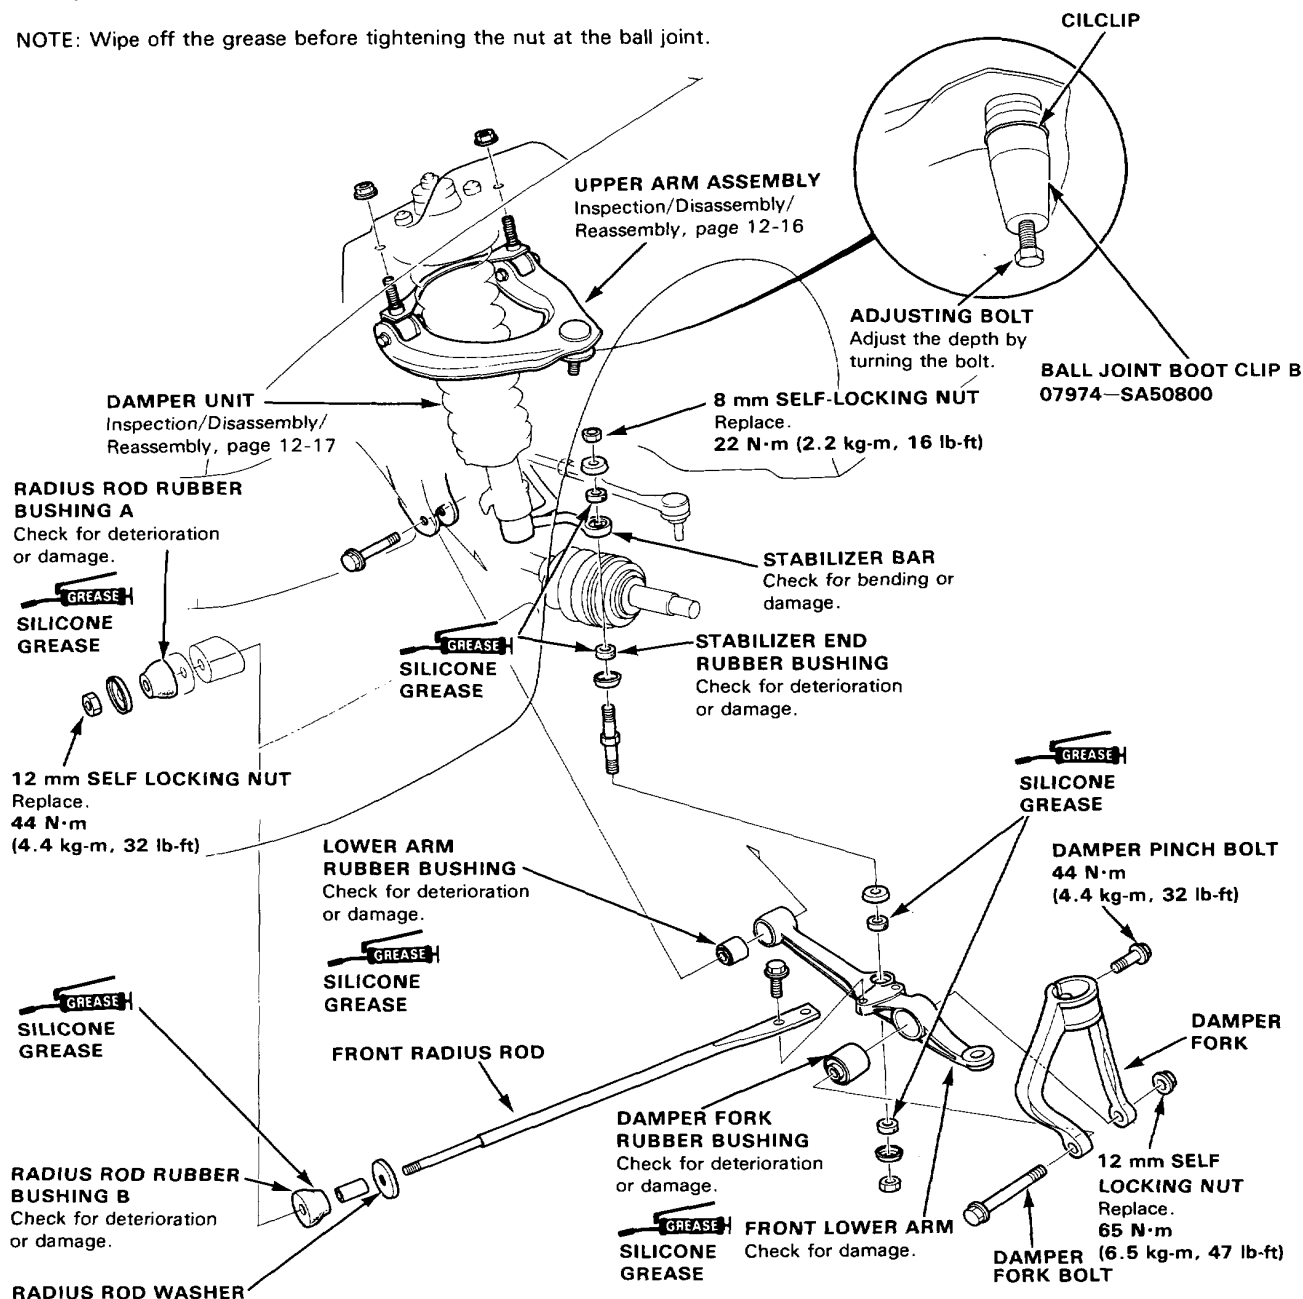

CAUTION: Do not interchange the radius rod rubber bushings. The thick bushing should be installed in front position.