

Heater Control

- Replacement -


1. Remove the center console.

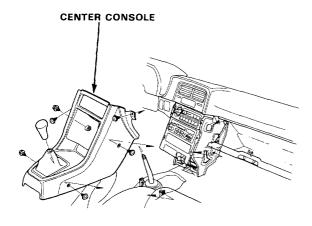

2. Remove the radio/cassette player.

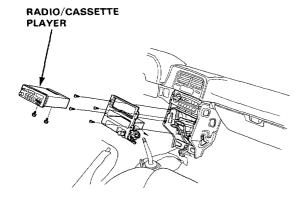

- 4. Disconnect the air mix cable at the heater assembly.
- Remove the tapping screws (4) and setting plate, then disconnect the wire harness conectors and cables.
 Remove the heater control.

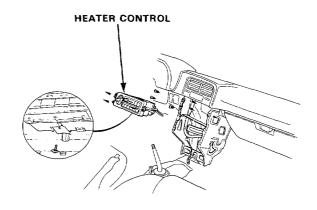

Install in the reverse order of removal and connect and make sure that it is properly adjusted (page 15-22).