

Symbol Marks


Abbreviation




The following symbols stand for:

 : Apply engine oil.

 : Apply brake fluid.

 : Apply grease.

 : Apply Power Steering Fluid.

 : Apply or check vacuum.

①, ②, ③, : Sequence for removal or installation
1, 2, 3, : Sequence for removal or installation

A/C	Air Conditioner
Assy	Assembly
ATT	Attachment
B or BAT	Battery
CATA	Catalytic Converter
EACV	Electronic Air Control Valve
ECU	PGM-FI Electronic Control Unit
EGR	Exhaust Gas Recirculation
EX	Exhaust
GND	Ground
IG	Ignition
IN	Intake
INT	Intermittent
L.	Left
LHD	Left Hand Drive
M/T	Manual Transmission
PCV	Positive Crankcase Ventilation
PGM-FI	Programmed Fuel-Injection
P/S	Power Steering
R.	Right
RHD	Right Hand Drive
SW	Switch
SOL. V	Solenoid Valve
TDC	Top Dead Center