




## Test


1. If the brake lights do not go on, check the No.35 (15A) fuse in the main fuse box, and the brake light bulbs in the taillight assembly.
2. If the fuse and bulbs are OK, disconnect the 2-P connector from the brake light switch.

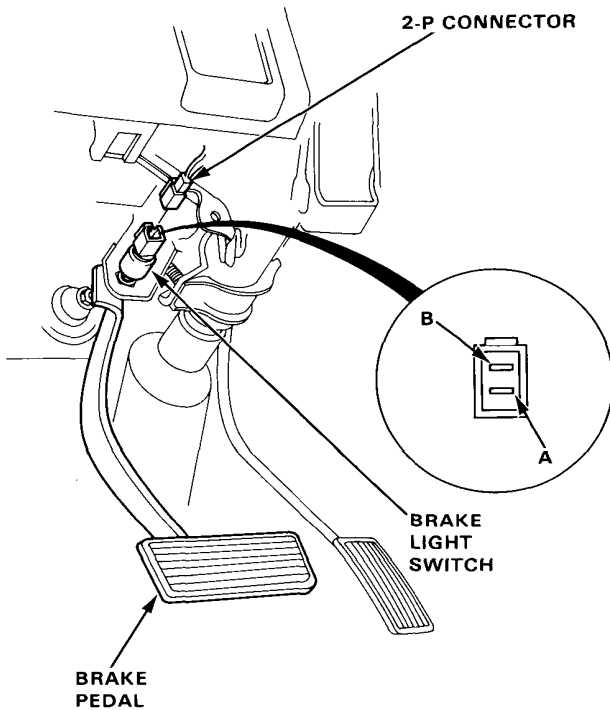

3. Check for continuity between the A and B terminals. There should be continuity with the brake pedal pushed.
  - if no continuity, replace the switch or adjust pedal height.
  - If there is continuity, but the brake lights do not go on:
    - Poor ground (G511, G551).
    - An open in the WHT/GRN or GRN/WHT wire.

## High Mount Brake Light Replacement

1. Open the hatch.
2. Remove the under cover and 2 mount bolts, then disconnect the 2-P connector from the light assembly.

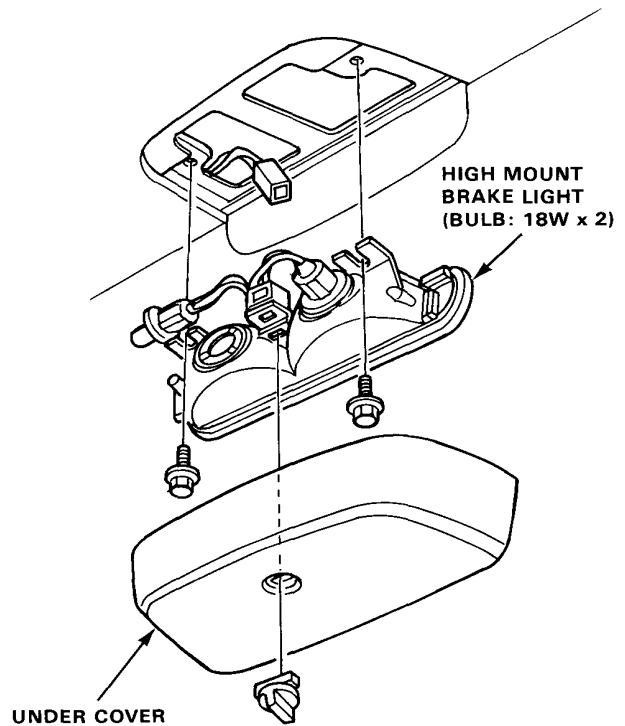

3. Turn the socket 45° counterclockwise to remove the bulb.
4. Install the high mount brake light in the reverse order of removal, and clean the rear window glass before installing.

**CAUTION:** When installing high mount brake light, make sure the mount rubber is sealed evenly to the rear window glass.