


# Lubrication Points


No.	LUBRICATION POINTS	LUBRICANT
1	Engine	API Service Grade: SE or SF SAE Viscosity: See chart below
2	Transmission Manual	API Service Grade: SE or SF SAE Viscosity: See chart below
3	Brake reservoir	Brake fluid DOT 3
4	Power steering reservoir	Honda power steering fluid P/N 08208-99961
5	Steering gearbox (Power steering)	Honda steering grease P/N 08733-B070E
6	Steering gearbox(Manual steering)	Multi-purpose Grease
7	Tilt steering	
8	Steering ball joints	
9	Suspension ball joints	
10	Steering boots	
11	Shift lever pivot	
12	Steering column bushings	
13	Pedal linkage	
14	Brake master cylinder push rod	
15	Tailgate hinges	
16	Door hinges upper and lower	
17	Door opening detents	
18	Fuel filler lid	
19	Engine hood hinges	
20	Engine hood latch	
21	Caliper Piston seal Dust seal Caliper pin Piston	Silicone Grease

Recommended Engine Oil  
(SE or SF Grade oil)

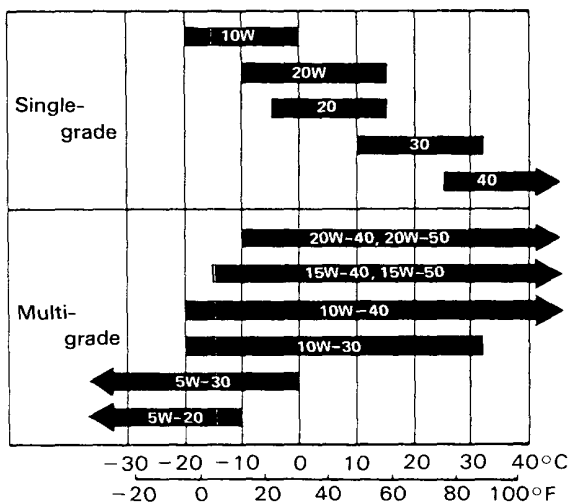

Engine oil viscosity for  
ambient temperature ranges

Recommended Manual Transmission Oil

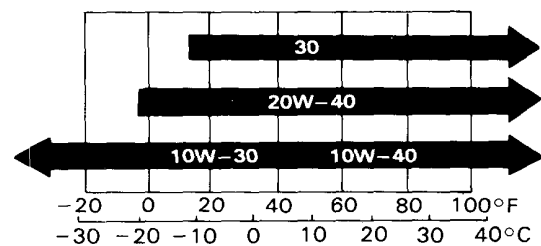

Transmission oil viscosity for  
ambient temperature ranges

**CAUTION:** Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

