


Component Locations


Index

SOHC Without CATA

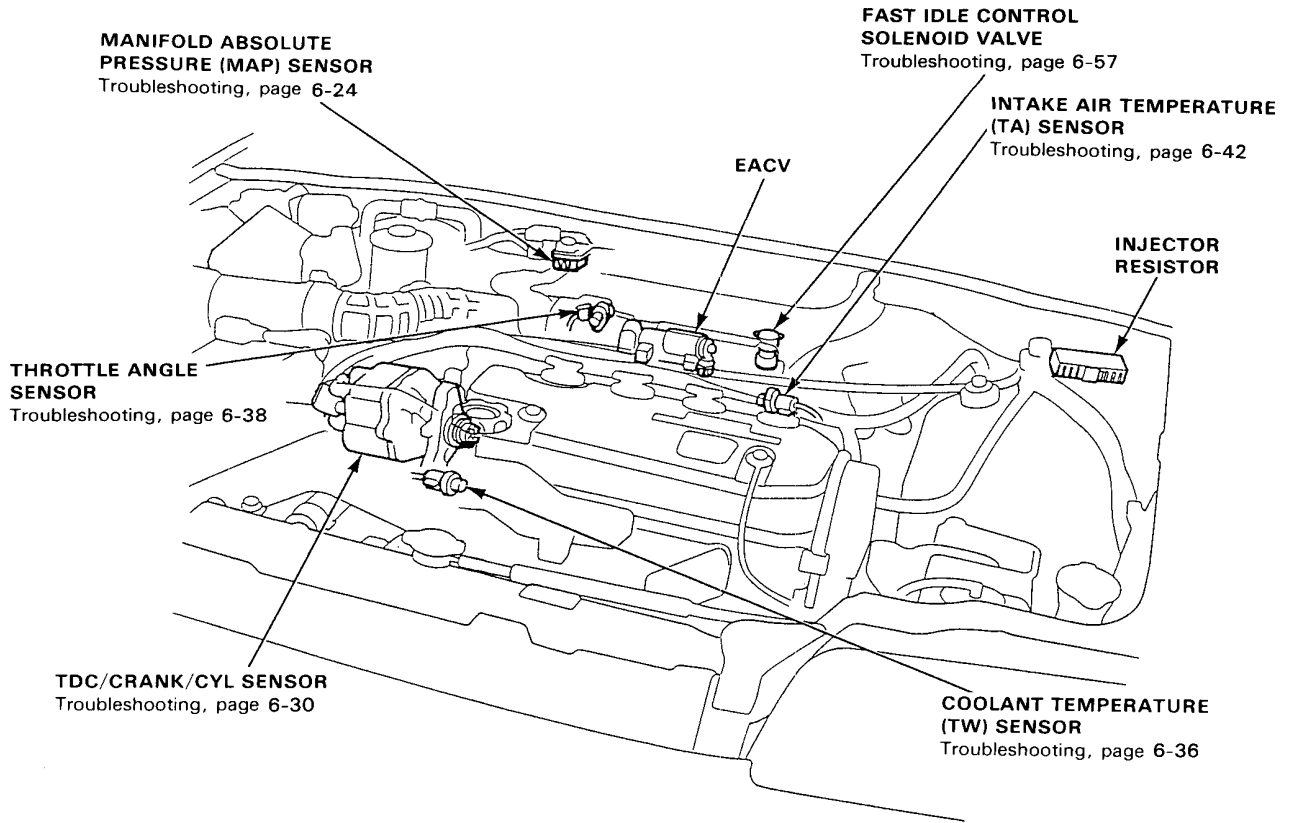




DOHC without CATA

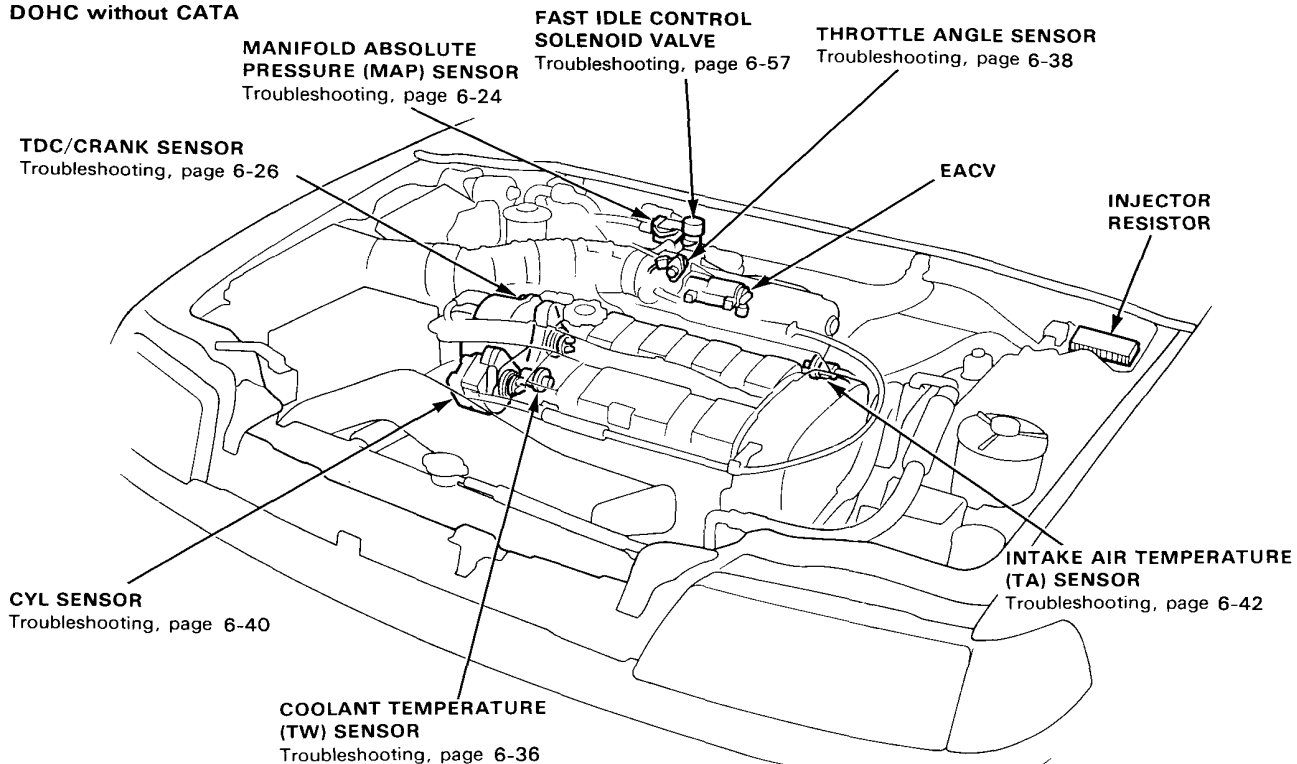

DOHC with CATA

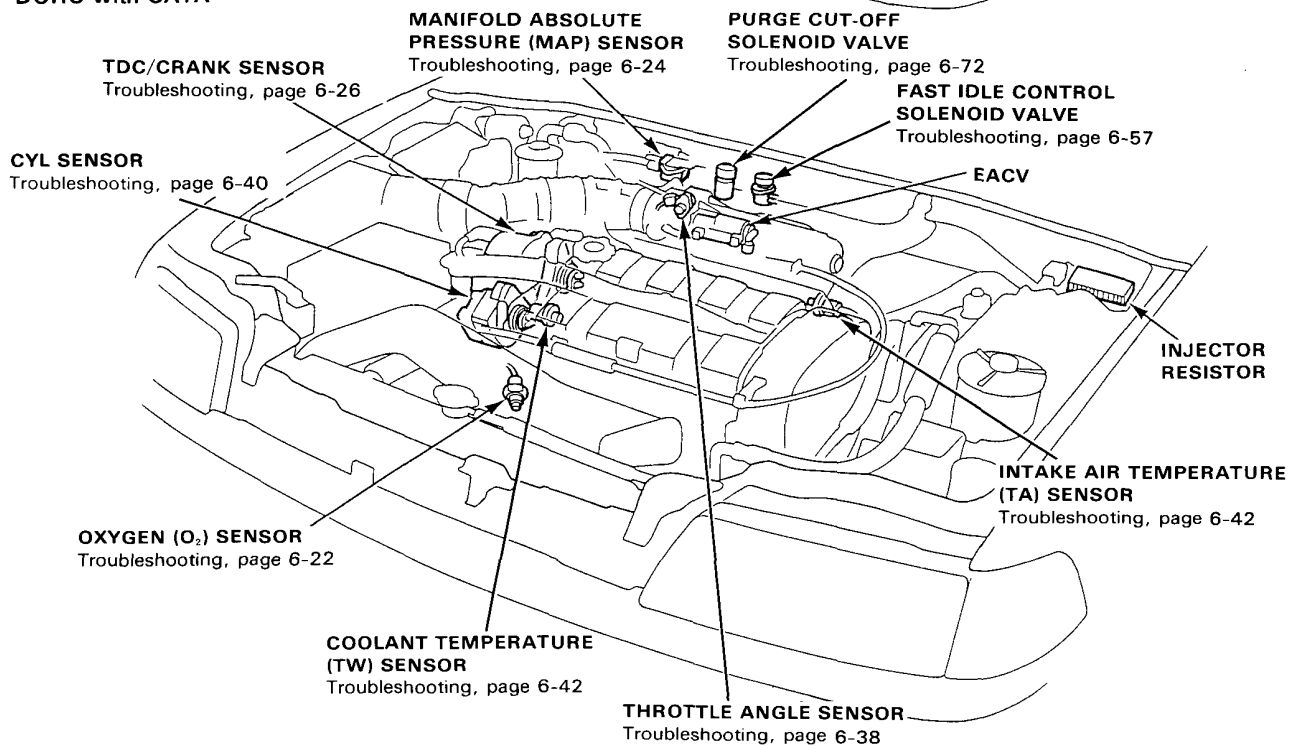



Component Locations

Index

LHD

IMA SENSOR [Without CATA]



ATMOSPHERIC PRESSURE (PA) SENSOR
Troubleshooting, page 6-44

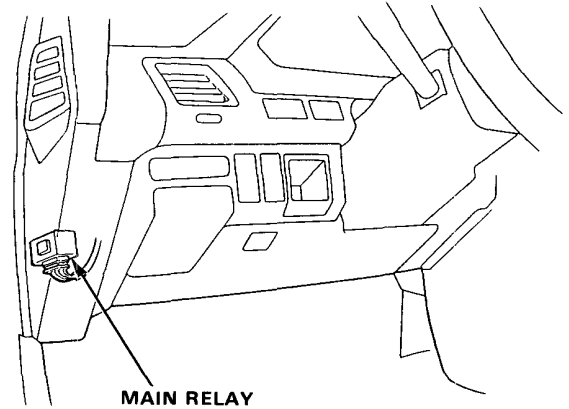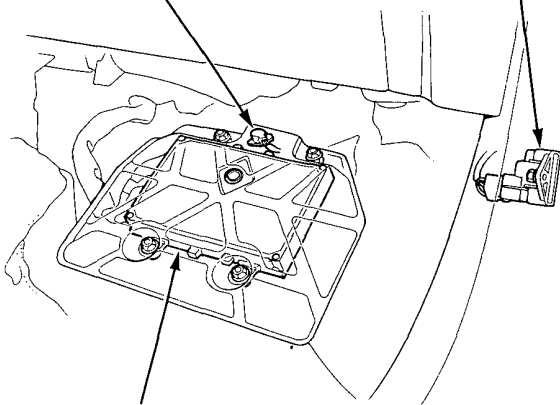

ELECTRONIC CONTROL UNIT (ECU)
Troubleshooting, page 6-18

RHD

IMA SENSOR [KE]

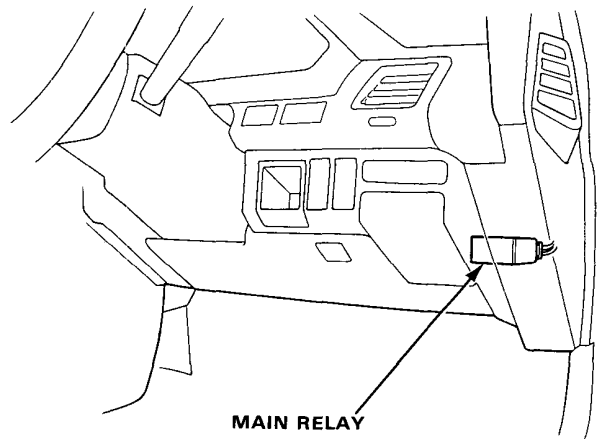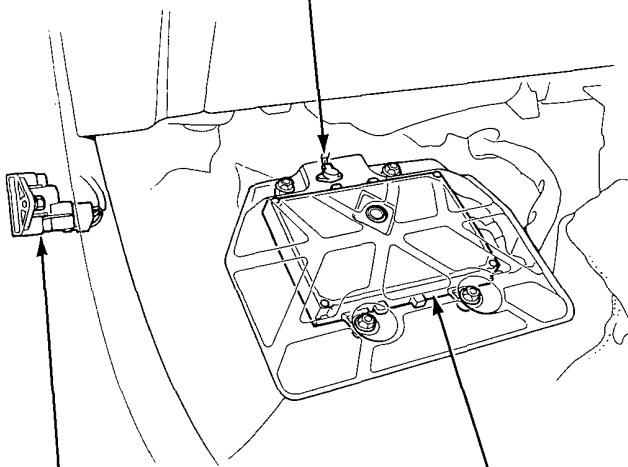

ATMOSPHERIC PRESSURE (PA) SENSOR [KE]
Troubleshooting, page 6-44

ELECTRONIC CONTROL UNIT (ECU)
Troubleshooting, page 6-18



AIR CLEANER ELEMENT

●EC, KQ: Replace every 2 years or 40,000 km (24,000 miles) whichever comes first.

●Others: Replace every 1 year or 20,000 km (12,000 miles) whichever comes first.

THROTTLE BODY

Inspection, page 6-66

Disassembly, page 6-68

DASHPOT DIAPHRAGM

Description, page 6-69

THROTTLE CABLE

Inspection/Adjustment, page 6-65

Installation, page 6-65

RESONATOR

AIR INTAKE TUBE

CHARCOAL CANISTER (with CATA)

Troubleshooting, page 6-72

FUEL FEED PIPE

FUEL PUMP

Testing, page 6-63

FUEL VAPOR PIPE

FUEL FILLER CAP

FUEL FILTER

FUEL INJECTORS

Troubleshooting,
page 6-60

PRESSURE REGULATOR

TWO-WAY VALVE

FUEL GAUGE SENDING UNIT

Testing, section 16

FUEL RETURN PIPE