


Fuses



Main Fuse Box

NOTE: Main fuse box is located right side, engine compartment.

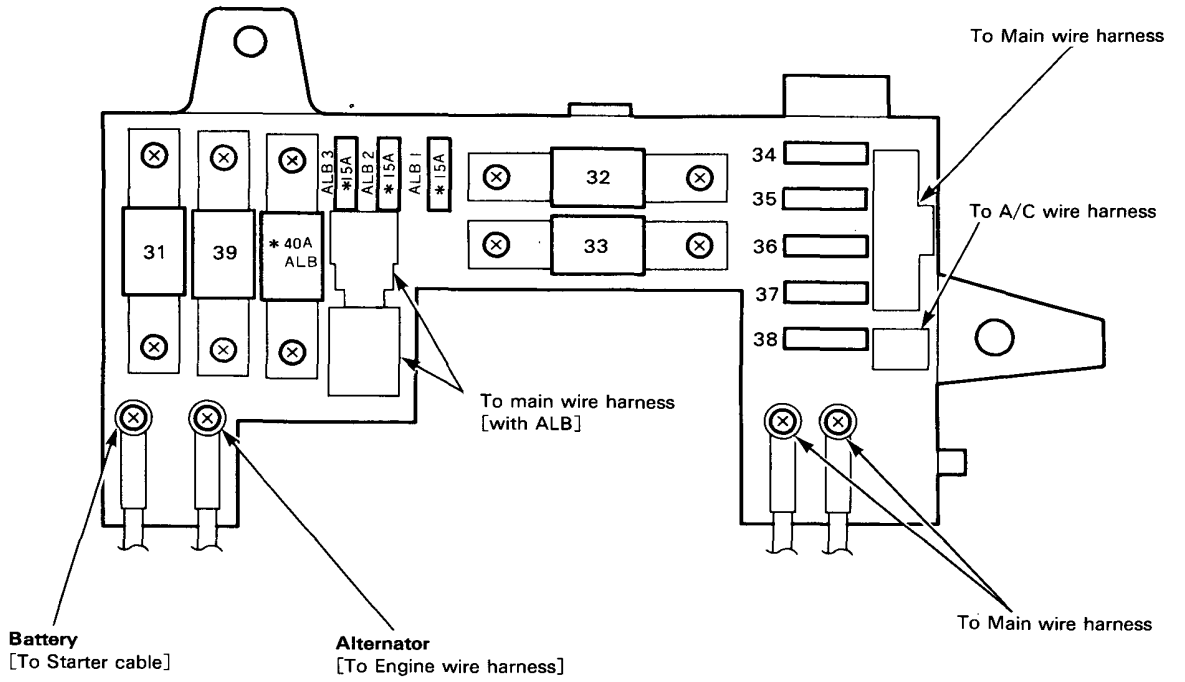

* with ALB