


Fuses

Dash Fuse box (LHD)

NOTE: Dash fuse box is located left side, under dash.

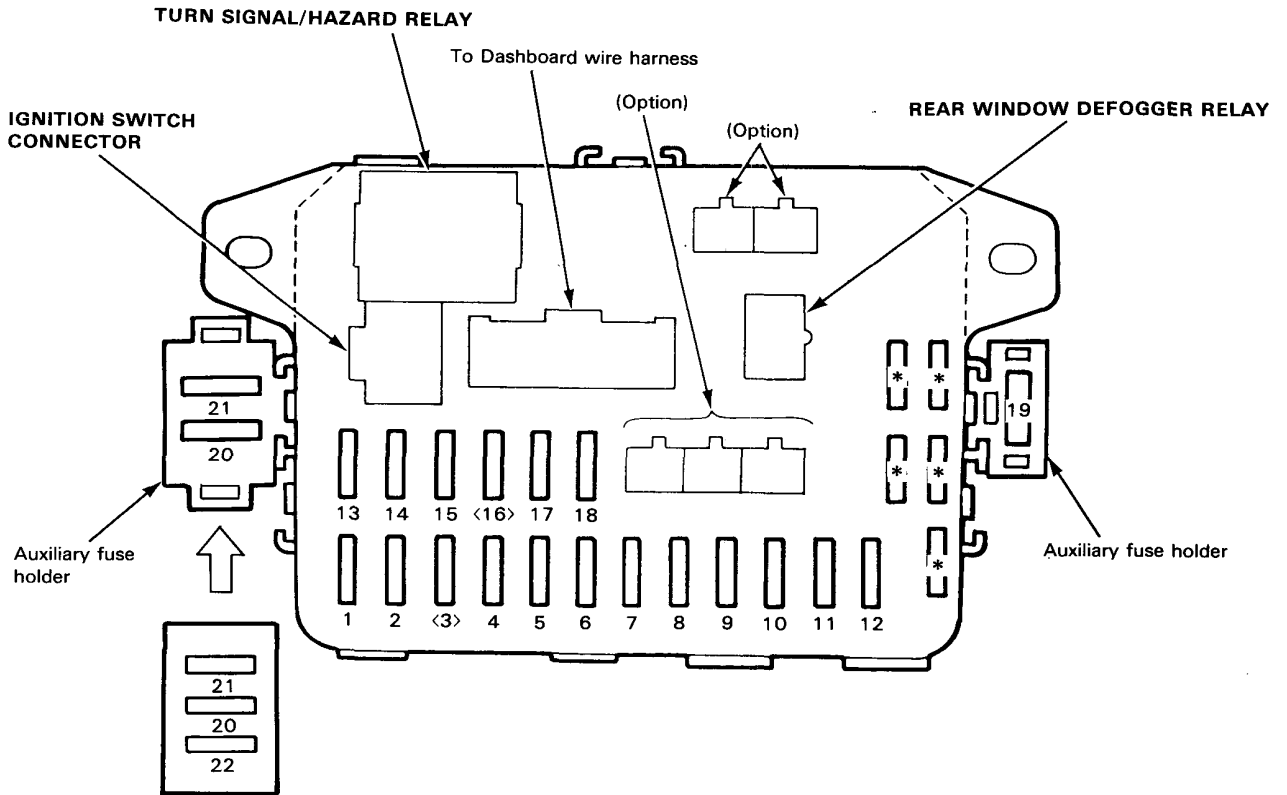

* : SPARE FUSE


< > : KS model only

No. 19(30 A) FUSE : Blower motor

No. 20(20 A) FUSE : Front passenger's power window

No. 21(20 A) FUSE : Driver's power window


No. 22(15 A) FUSE : Seat heaters-KS model

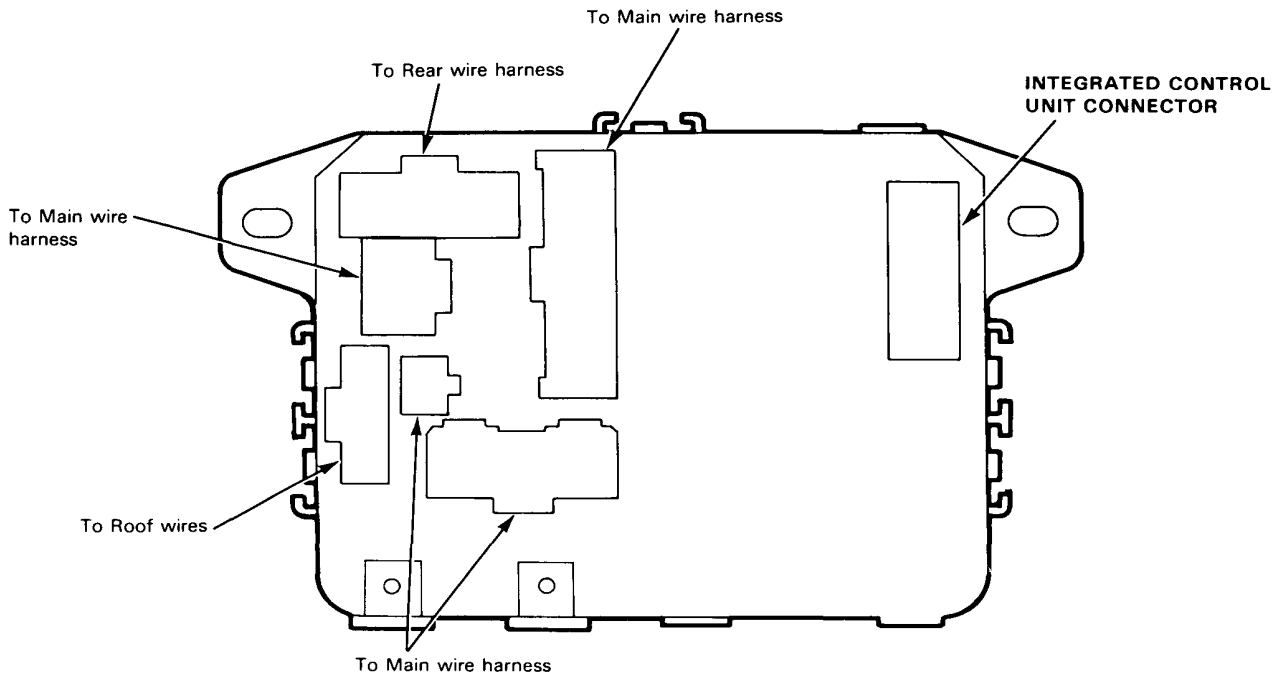

Fuses

Dash Fuse Box (RHD)

NOTE: Dash fuse box is located right side, under dash.

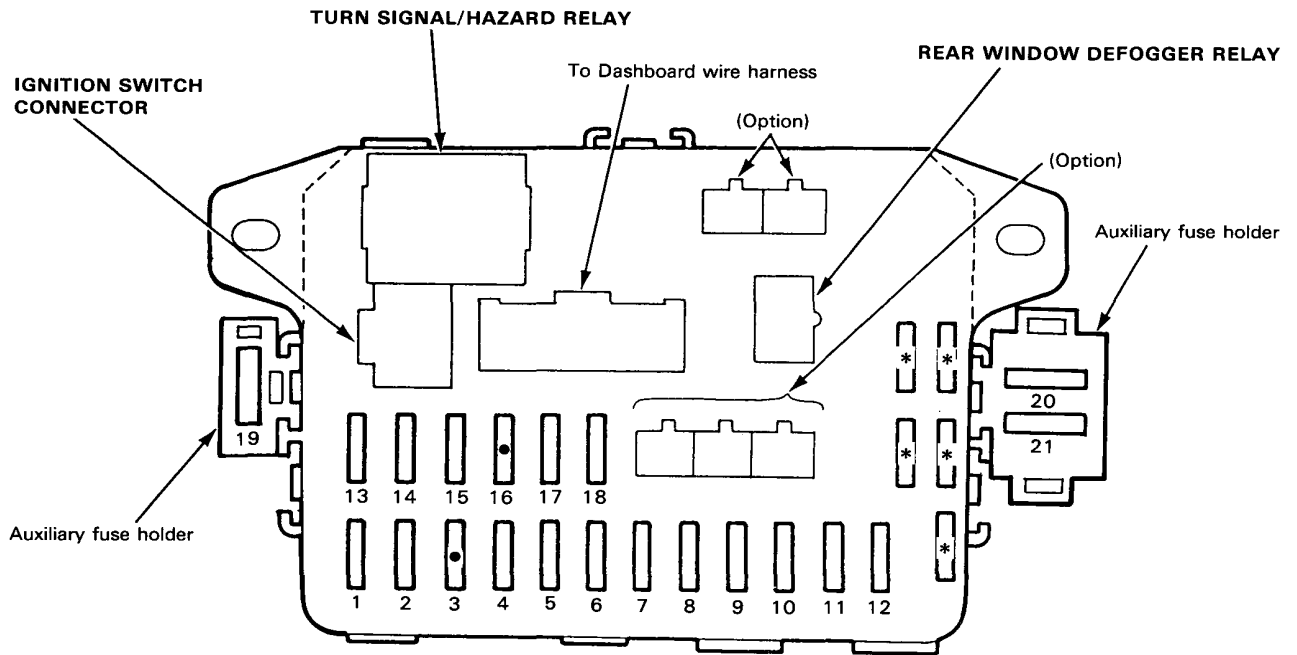

* : SPAER FUSE

● : Not used

No. 19(30 A)FUSE : Blower motor

No. 20(20 A)FUSE : Driver's power window

No. 21(20 A)FUSE : Front passenger's power window

