

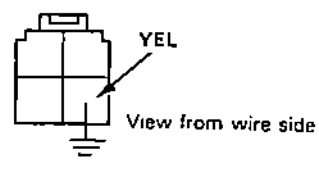
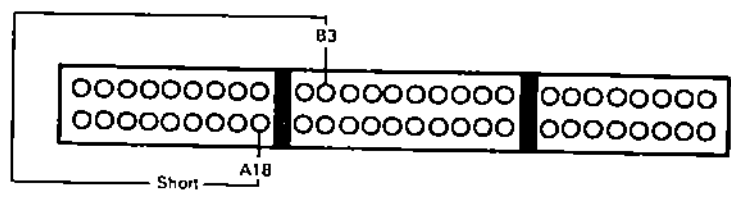


Idle Control System

Troubleshooting Flowchart — Air Conditioning Signal

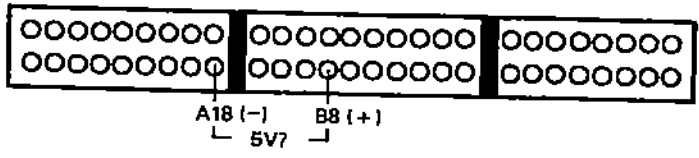

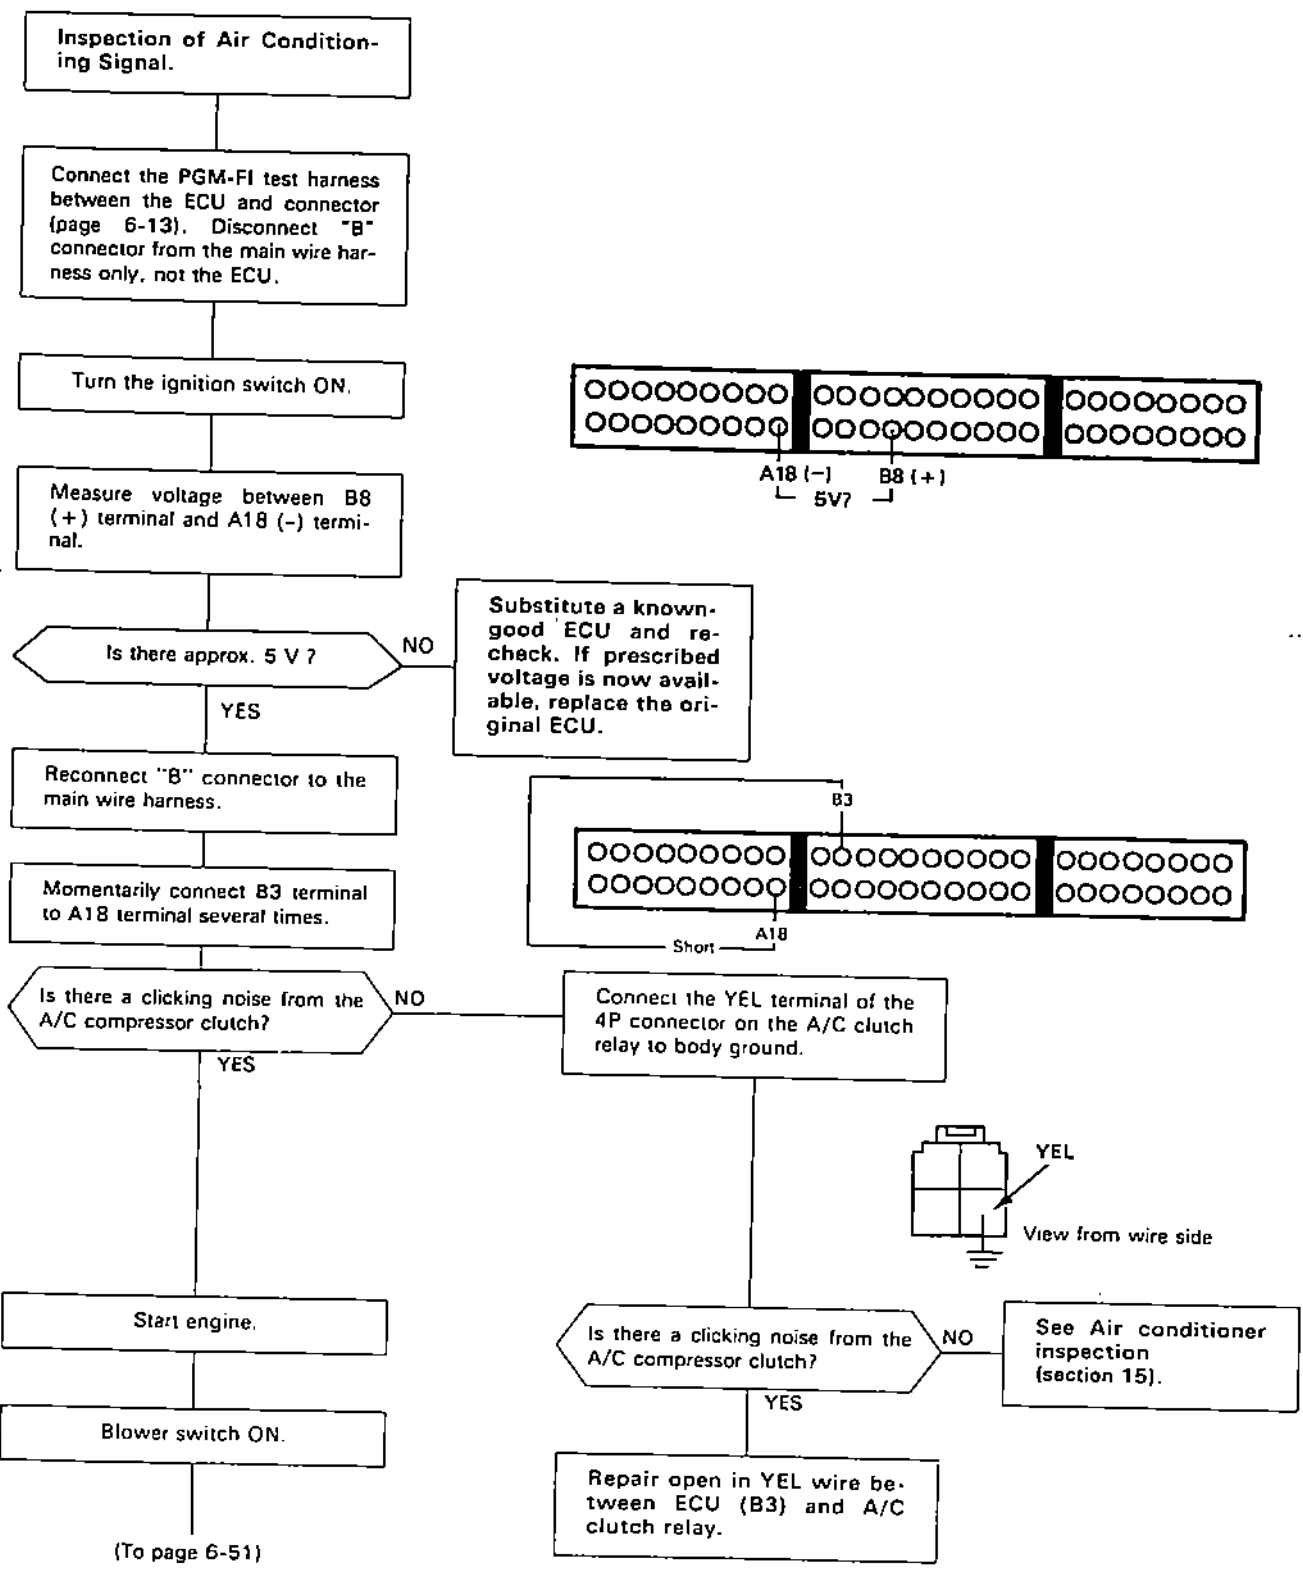

(From page 6-50)

A/C switch ON.

Does A/C operate?

YES

Air conditioning signal is OK.

NO

Measure voltage between B8 (+) terminal and A18 (-) terminal.

Is voltage less than 1V?

YES

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.

NO

Repair open in BLU/RED wire between ECU (B8) and A/C switch.

