



Idle control System

Troubleshooting Flowchart — Brake Switch Signal

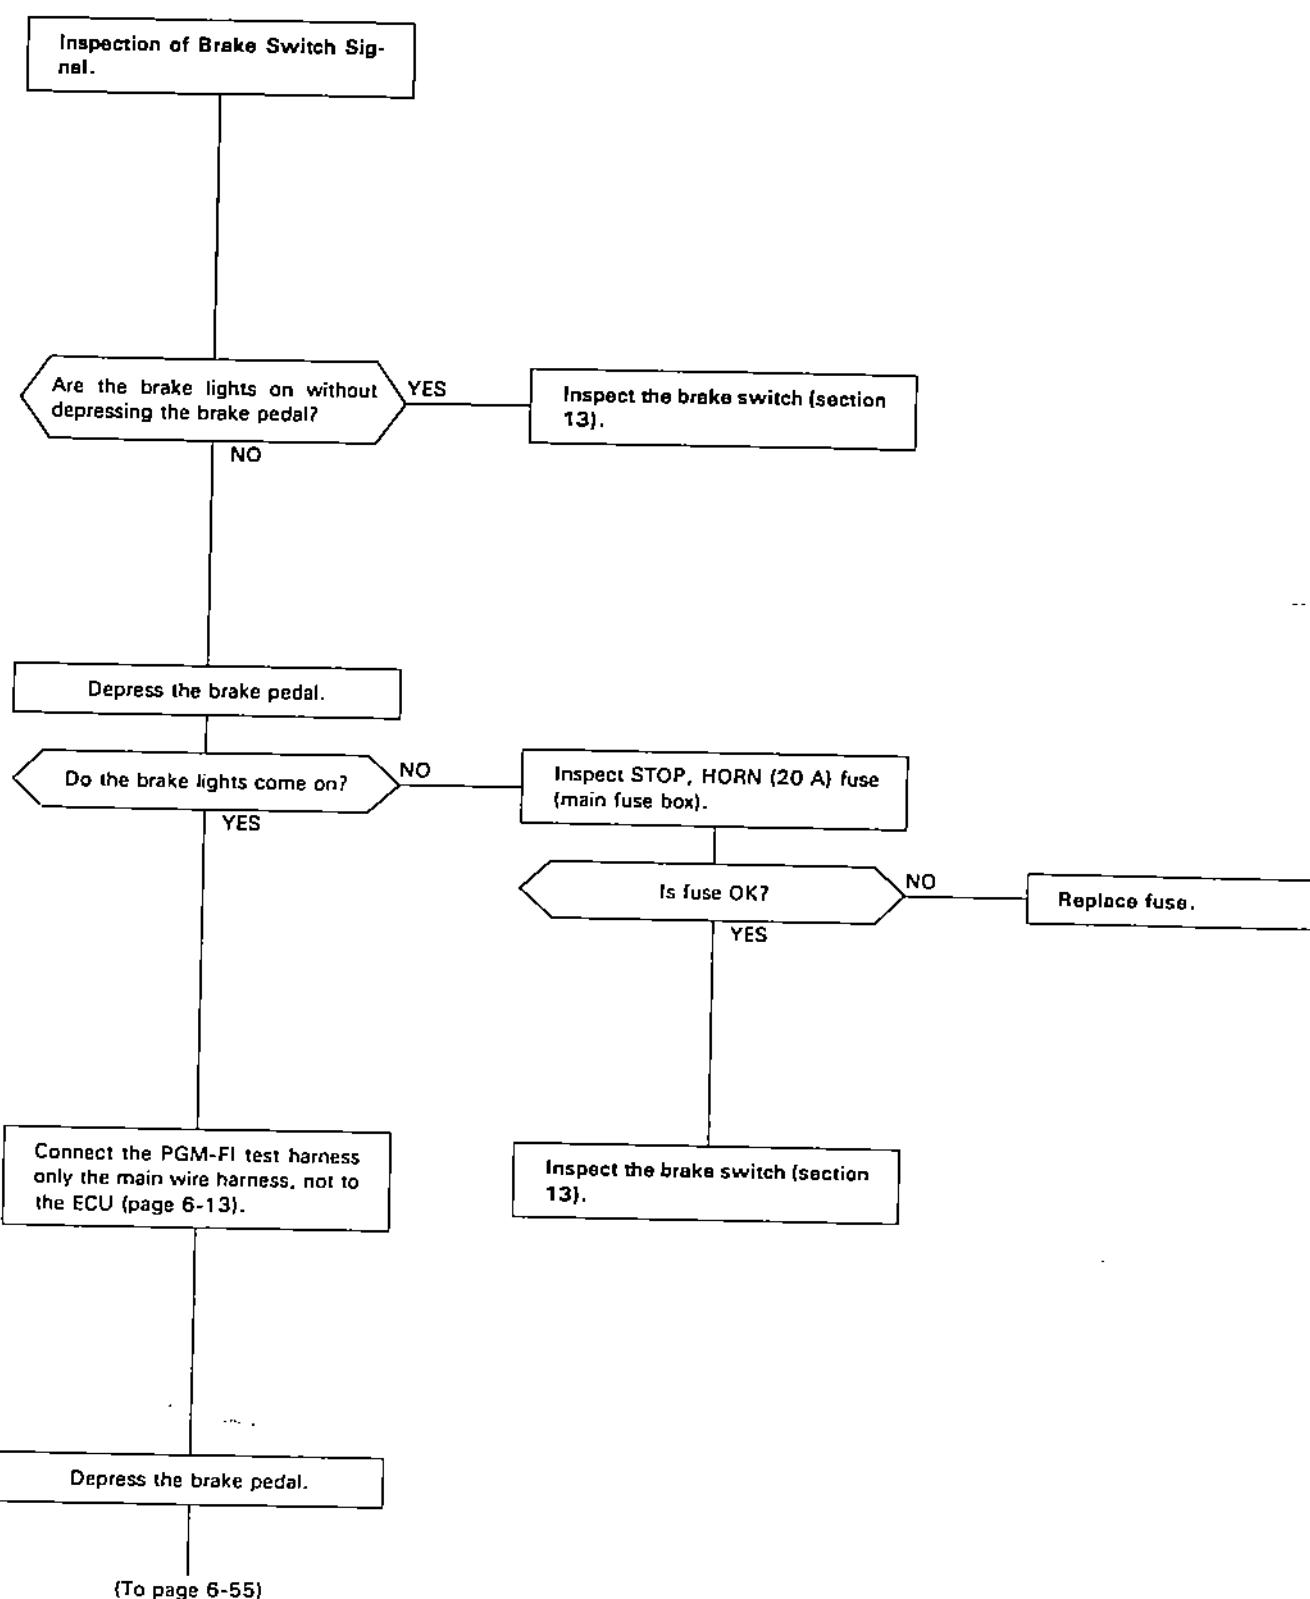



(From page 6-54)

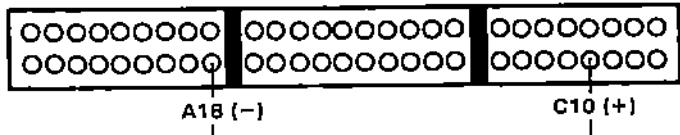

Measure voltage between C10 (+) terminal and A18 (-) terminal.

Is there battery voltage?

YES

Brake switch signal is OK.

NO

Repair open in GRN/WHT wire between the brake switch and ECU (C10).