

Idle Control System

Troubleshooting Flowchart

Starter Switch Signal

Inspection of Starter Switch Signal.

Connect the PGM-FI test harness between the ECU and connector (page 6-13).

Measure voltage between B13 (+) terminal and A18 (-) terminal with ignition switch in the start position.

Is there battery voltage?

YES

Starter switch signal is OK.

NO

Inspect No.2 fuse.

Is No.2 fuse OK?

YES

Repair open in BLU/WHT wire between ECU (B13) and No.2 fuse.

NO

Replace fuse.

