


Fuses

Dash Fuse box (LHD)

NOTE: Dash fuse box is located left side, under dash.

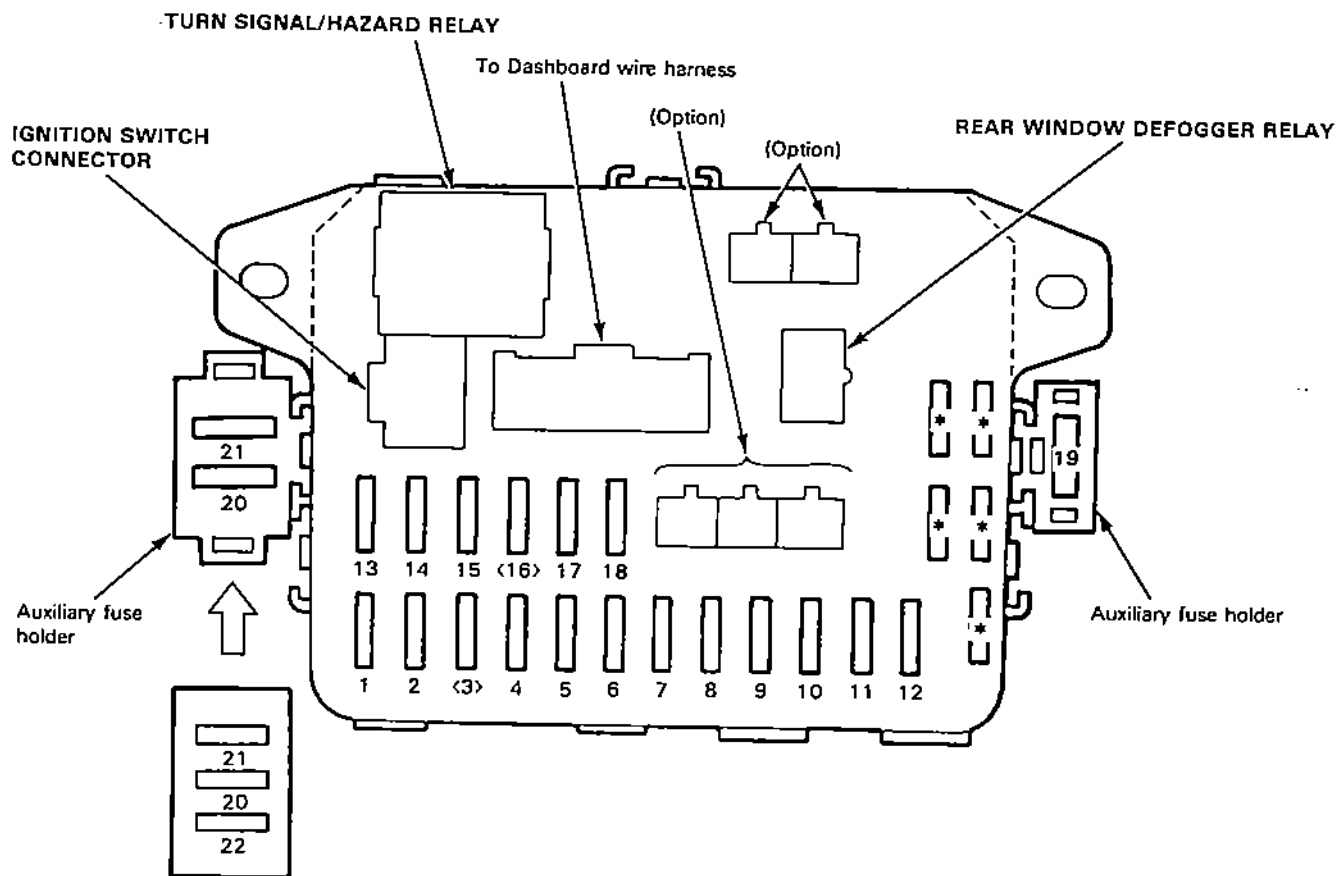

- * : SPARE FUSE
- < > : KS model only
- No. 19(30 A)FUSE : Blower motor
- No. 20(20 A)FUSE : Front passenger's power window
- No. 21(20 A)FUSE : Driver's power window
- No. 22(15 A)FUSE : Seat heaters-KS model

