





Clock

Removal

- 1. Remove the center outlet from the dashboard, then disconnect the 4-P connector from the clock.
- 2. Remove the 2 screws and clock from the center outlet.

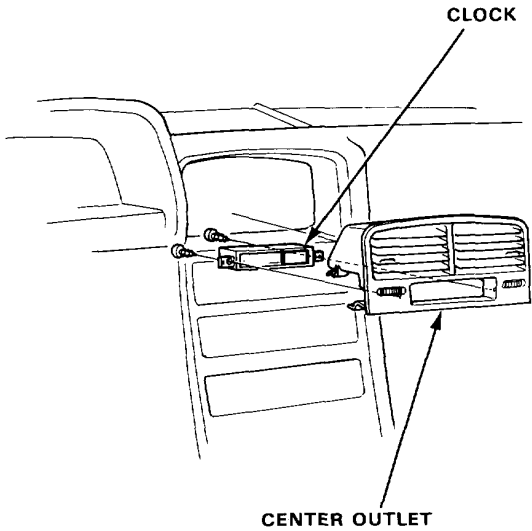

Terminals

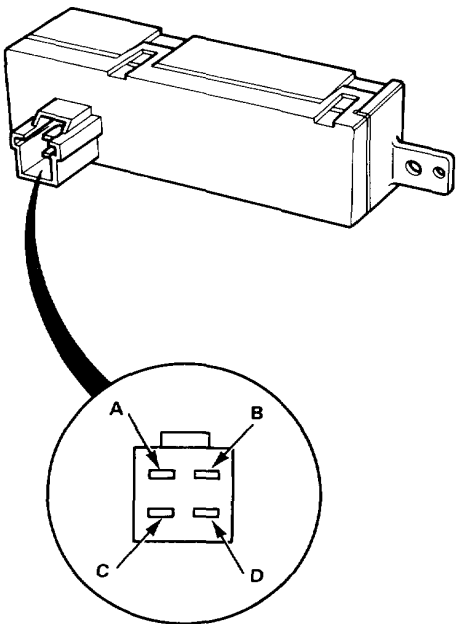

Terminal	Wire	Destination
A	WHT/BLU	Constant power (Time memory)
B	YEL	IG1 (Main clock power supply)
C	RED/BLK	Light-on signal
D	BLK	Ground