





12. Remove the E-clip from the push rod.

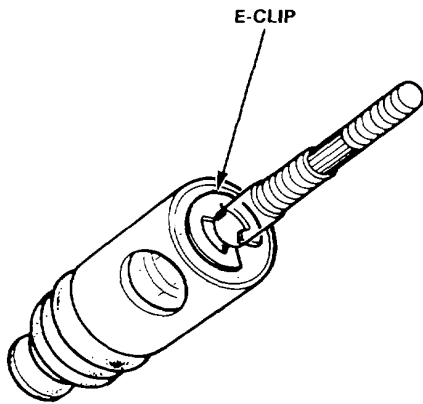


13. Remove filter A (Felt), spring seat, outer valve spring, inner valve spring, valve holder, poppet valve and push rod.

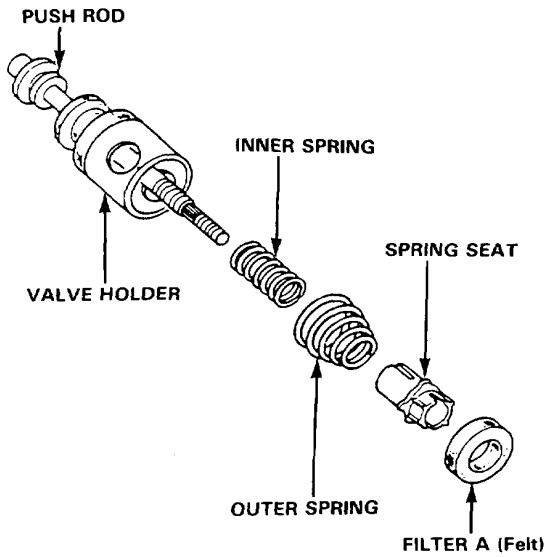

Rebuild Kit

E-CLIP SEAL 10 mm SNAP RING

REACTION RUBBER

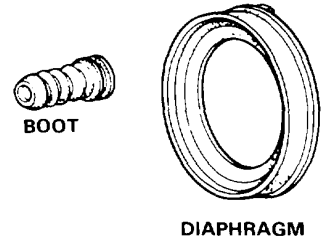

POPPET VALVE FILTER A (Felt) E-CLIP

FILTER B (Foam) SNAP RING BUSHING RETAINER

BUSHING PISTON SEAL 19 mm SNAP RING

O-RING SILICONE GREASE