

Rear Bumper




Replacement

1. Remove the 2 bumper mount screws on each side at the corner edge of the bumper.
2. Remove the 2 bumper lower mount nuts.
3. Remove the rear trim panel.
4. Remove the 2 bumper upper mount nuts from the trunk area.
5. Remove the bumper by sliding it to the rear and disconnect the license light/rear fog light wire connectors.
NOTE: Do not damage the threads of the bumper bolts.

If necessary:

6. Remove the screws, then remove the corner slide and slide clip.

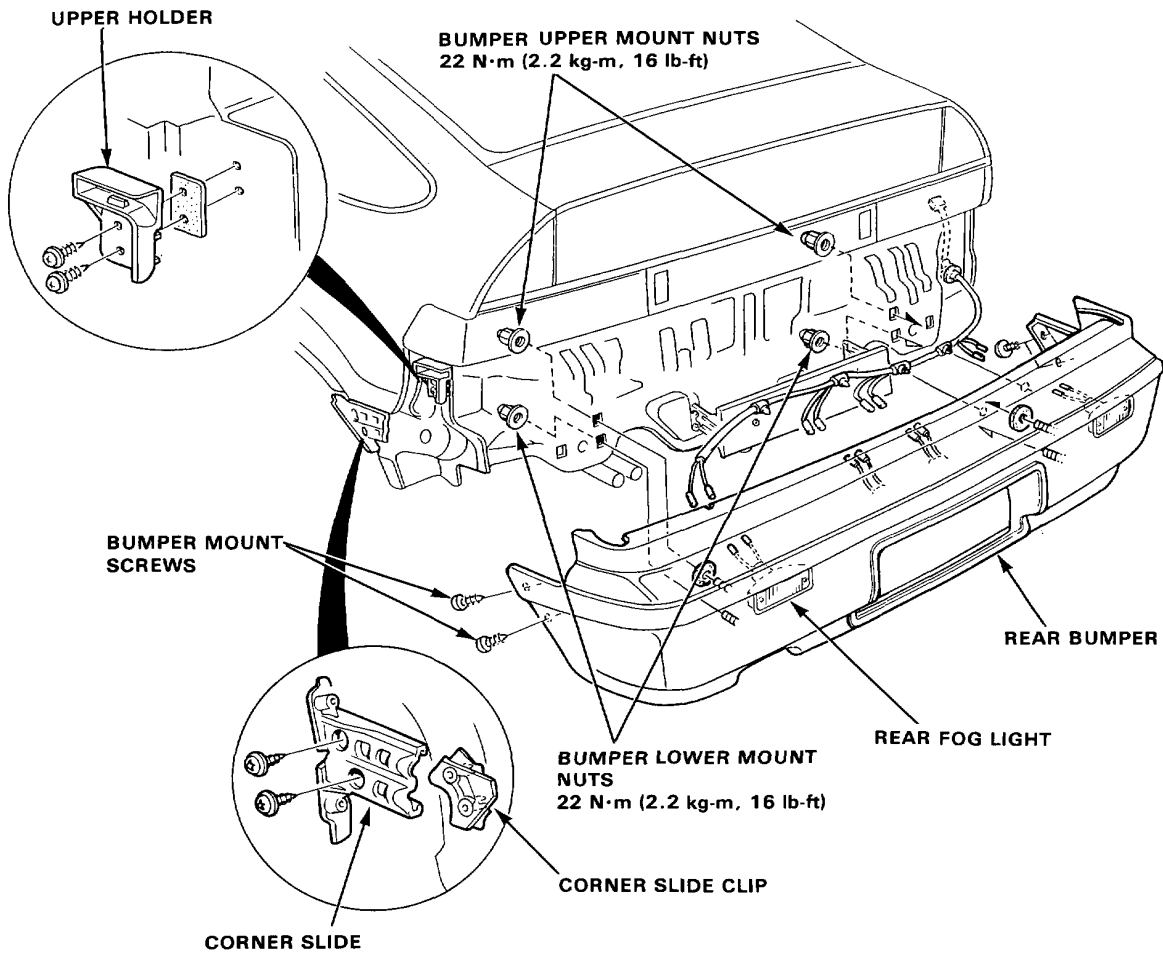

7. Installation sequence is essentially the reverse order of removal.