



# Lubrication Points

No.	LUBRICATION POINTS	LUBRICANT
1	Engine	API Service Grade: SE, SF or SG 10W-30 SAE Viscosity: See chart below
2	Transmission Manual	API Service Grade: SE or SF SAE Viscosity: See chart below
3	Brake line (ALB line for ALB models)	Brake fluid DOT 3 or DOT 4
4	Shift lever pivot	Silicone grease with molybdenum disulfide
5-18	5 Tilt steering 6 Steering ball joints 7 Suspension ball joints 8 Steering boots 9 Steering gearbox 10 Steering column bushings 11 Pedal linkage 12 Brake master cylinder push rod 13 Tailgate hinges 14 Door hinges upper and lower 15 Door opening detents 16 Fuel filler lid 17 Engine hood hinges 18 Engine hood latch	Multi- purpose Grease
19	Caliper Piston seal Dust seal Caliper pin Piston.	Silicone Grease

Recommended Engine Oil  
(SE, SF or SG Grade 10W-30 only)

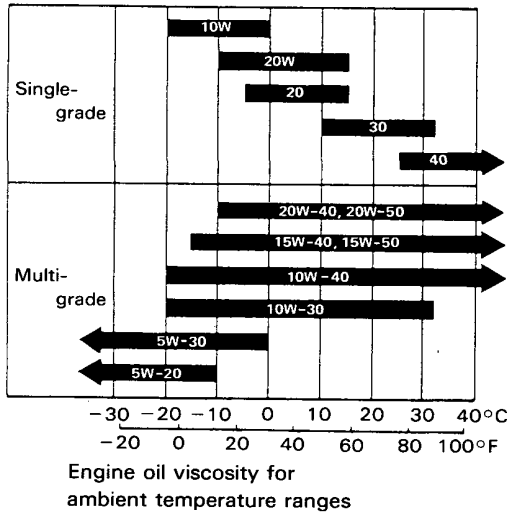

Recommended Manual Transmission Oil  
(SE or SF Grade oil)

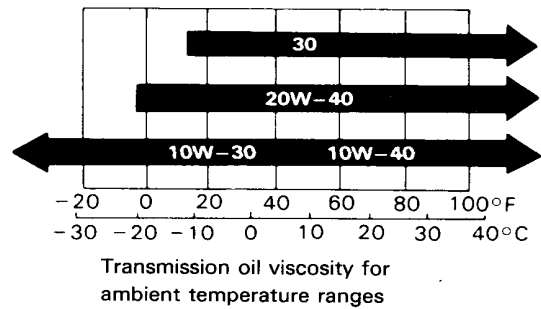

**CAUTION:** Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

