


# Lubrication Points


No.	LUBRICATION POINTS	LUBRICANT
1	Engine	API Service Grade: SE, SF or SG 10W-30 SAE Viscosity: See chart below
2	Transmission Manual	API Service Grade: SE or SF SAE Viscosity: See chart below
3	Brake line (ALB line for ALB models)	Brake fluid DOT 3 or DOT 4
4	Shift lever pivot	Silicone grease with molybdenum disulfide
5	Tilt steering	Multi- purpose Grease
6	Steering ball joints	
7	Suspension ball joints	
8	Steering boots	
9	Steering gearbox	
10	Steering column bushings	
11	Pedal linkage	
12	Brake master cylinder push rod	
13	Tailgate hinges	
14	Door hinges upper and lower	
15	Door opening detents	
16	Fuel filler lid	
17	Engine hood hinges	
18	Engine hood latch	
19	Caliper Piston seal Dust seal Caliper pin Piston	Silicone Grease

Recommended Engine Oil  
(SE, SF or SG Grade 10W-30 only)

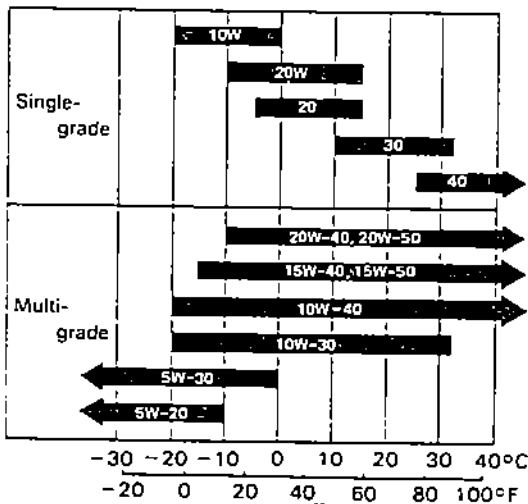

Engine oil viscosity for ambient temperature ranges

Recommended Manual Transmission Oil  
(SE or SF Grade oil)

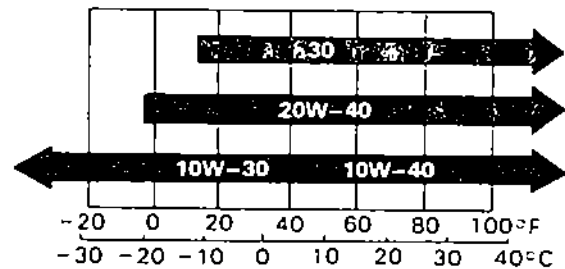

Transmission oil viscosity for ambient temperature ranges

**CAUTION:** Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

