


Radiator

Cap Testing

1. Remove the radiator cap, wet its seal with coolant, then install it on the pressure tester.
2. Apply a pressure of 74–103 kPa (0.75–1.05 kg/cm², 11–15 psi).
3. Check for a drop in pressure.

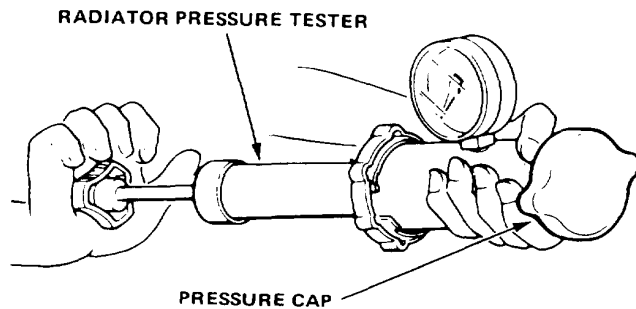

Radiator Testing

1. Wait until the engine is cool, then carefully remove the pressure cap and fill the radiator with coolant to the top of the filler neck.
2. Attach the pressure tester to the radiator and apply a pressure of 74–103 kPa (0.75–1.05 kg/cm², 11–15 psi).
3. Inspect for coolant leaks and a drop in pressure.
4. Remove the tester and reinstall the pressure cap.

NOTE: Check for engine oil in coolant and/or coolant in engine oil.

